


**EQE6879**



**EN** Refrigeration

User Manual

2

**Enjoy peace of mind.  
Register your appliance today.**

Stay updated on better living services,  
safety notices and shop for accessories.

- 1. Open the camera app  
on your smartphone  
and point at the QR  
code to scan**

Product Registration QR code  
is located on the front of the door  
or internal side wall of your fridge.



- 2. Tap the notification or link to open the  
registration form**

- 3. Complete your details and enjoy peace  
of mind**



**Electrolux**

A10883157-A-422021

## Contents

|                                         |    |
|-----------------------------------------|----|
| 1. SAFETY INFORMATION .....             | 3  |
| 2. FEATURES AT A GLANCE .....           | 4  |
| 3. INSTALLING YOUR NEW APPLIANCE.....   | 5  |
| 4. CONNECTING THE WATER SUPPLY.....     | 7  |
| 5. CONTROL.....                         | 9  |
| 5.1 External User interface .....       | 9  |
| 5.2 TASTESEALFLEX control panel .....   | 11 |
| 6. SETTING COOLING TEMPERATURES.....    | 12 |
| 7. AUTOMATIC ICE & WATER DISPENSER..... | 13 |
| 8. STORAGE FEATURESER.....              | 15 |
| 9. GENERAL INFORMATION.....             | 18 |
| 9.1 CLEANING YOUR REFRIGERATOR .....    | 18 |
| 9.2 CHANGING THE FILTER .....           | 18 |
| 10. FOOD STORAGE GUIDE.....             | 20 |
| 11. TROUBLESHOOTING.....                | 21 |

## WE'RE THINKING OF YOU

Thank you for choosing this Electrolux product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

### Visit our website to:



Get usage advice, brochures, trouble shooter, service information:  
**[www.electrolux.com](http://www.electrolux.com)**



Register your product for better service:  
**[www.electrolux.com/productregiyratation](http://www.electrolux.com/productregiyratation)**



Buy Accessories, Consumables and Original spare parts for your appliance:  
**[www.electrolux.com/shop](http://www.electrolux.com/shop)**

## CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.



Warning / Caution-Safety information.



General information and tips.



Environmental information.

Subject to change without notice.

# 1. SAFETY INFORMATION

*Note: You must read these warnings carefully before installing or using the refrigerator.*

If you need assistance, contact your customer care centre. The manufacturer will not accept liability, should these instructions or any other safety instructions incorporated in this book be ignored.



## WARNING

- It is essential the electric outlet is properly earthed to ground. Consult a qualified electrician if you are unsure.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Unplug the refrigerator before cleaning or moving it to avoid electric shock.
- Never unplug the refrigerator by pulling the electrical cord as this may damage it. Grip the plug firmly and pull straight out.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Don't use a steam cleaner. If live components come into contact with condensing steam, they may short-circuit or cause an electric shock.
- Do not store explosive substances such as aerosol cans with a flammable propellant this appliance. If pressurised aerosol containers bear the word 'flammable' and/or a small flame symbol, do not store them inside any refrigerator or freezer. If you do so you may cause an explosion.
- Do not damage the refrigerant circuit.
- This appliance contains insulation formed with flammable blowing gases. Avoid safety hazards by carefully disposing of this appliance.
- If you wish to discard this refrigerator, please contact your local authorities and ask for the correct method of disposal.
- When you dispose of your old refrigerators and freezers, remove any doors. Children can suffocate if they get trapped inside.

- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.



## WARNING


R600a refrigerant warning



This appliance contains flammable R600a refrigerant. Avoid safety hazards by carefully installing, handling, servicing and disposing of this appliance.

- Ensure that the tubing of the refrigerant circuit is not damaged during transportation and installation.
- Leaking refrigerant may cause eye injuries or ignite.
- The room for installing appliance must be at least 1m<sup>3</sup> per 8g of refrigerant. The amount of refrigerant in the appliance can be found on the rating plate inside the appliance.
- If you are unsure of the refrigerant check the rating plate inside the refrigerator compartment.
- It is hazardous for anyone other than an Authorised Service Person to service this appliance. In Queensland Australia the Authorisation Service Person MUST hold a Gas Work Authorisation for hydrocarbon refrigerants to carry out servicing or repairs which involve the removal of covers.
- Keep ventilation openings in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

## 2. FEATURES AT A GLANCE

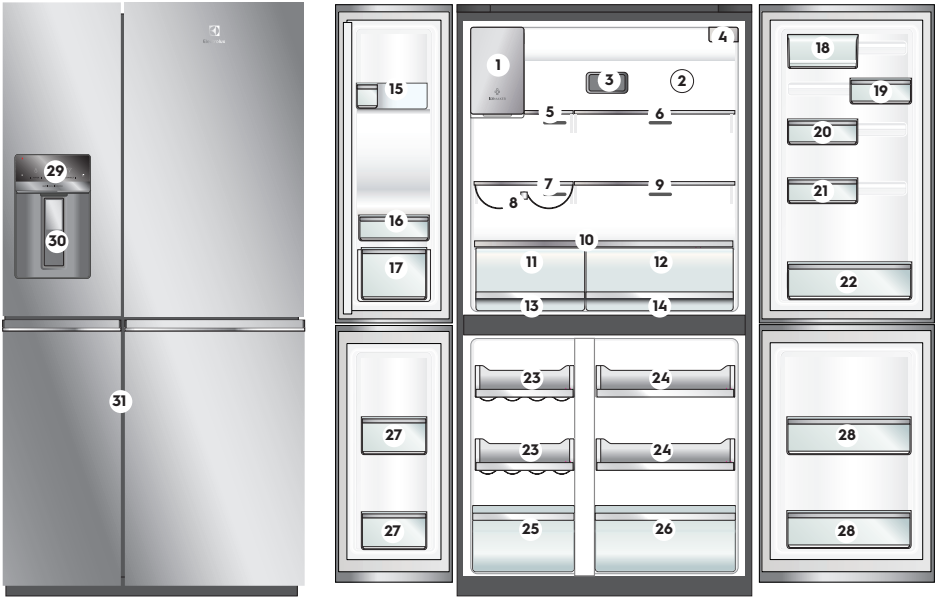

- |    |                              |    |                              |    |                                               |
|----|------------------------------|----|------------------------------|----|-----------------------------------------------|
| 1  | Ice Maker                    | 11 | Crisper                      | 21 | Expandable bin                                |
| 2  | Air distributor - Multiflow  | 12 | Crisper                      | 22 | Bottle storage bin                            |
| 3  | Air filter                   | 13 | Left Snack Zone compartment  | 23 | FlexSpace™ shelf                              |
| 4  | Water filter                 | 14 | Right Snack Zone Compartment | 24 | Freezer shelf                                 |
| 5  | Flip up glass shelf          | 15 | Upper fixed door bin         | 25 | FlexSpace™ drawer                             |
| 6  | Slide/fold glass shelf       | 16 | Left fixed door bin          | 26 | Freezer drawer                                |
| 7  | Left Spillsafe™ glass shelf  | 17 | Left door bin                | 27 | FlexSpace™ door bin                           |
| 8  | Wine rack                    | 18 | FlexStor™ dairy bin          | 28 | Freezer door bin                              |
| 9  | Right Spillsafe™ glass shelf | 19 | FlexStor™ 1/3 bin            | 29 | Refrigerator/Freezer control panel            |
| 10 | Crisper shelf cover          | 20 | FlexStor™ 2/3 bin            | 30 | Water and Ice Dispenser Trigger               |
|    |                              |    |                              | 31 | TASTESEALFLEX control panel<br>(On door side) |

### 3. INSTALLING YOUR NEW APPLIANCE

#### Unpacking



#### ENVIRONMENT

Most of the packing materials are recyclable. Please dispose of those materials through your local recycling depot or by placing them in appropriate collection containers.

Important – check for any damages or marks. If you find the refrigerator is damaged or marked, you must report it within 7 days should you wish to claim for damage/marks under the manufacturers warranty. This does not affect your statutory rights.

Clean your refrigerator thoroughly following the instructions in the “Cleaning” section and wipe off any dust that has accumulated during shipping.

#### Locating the refrigerator



#### CAUTION


Automatic aerosol systems (such as insect control) should not be located adjacent to the product as the spray may cause long term damage to the external plastics of the appliance.

Do not put the refrigerator in a location that is too cold or is unprotected, for example in a garage or on a veranda. The ambient temperature should be above 10°C.


Put the refrigerator in a dry place avoiding areas of high moisture or humidity. Ensure the refrigerator is located on an even surface.

#### Adequate ventilation around your refrigerator

The diagram below shows the recommended airspace to allow for ventilation of your refrigerator.

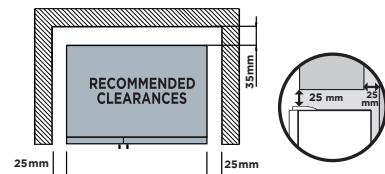


When positioned in a corner area, spacing of right side at least 260 mm and left side at least 355 mm on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

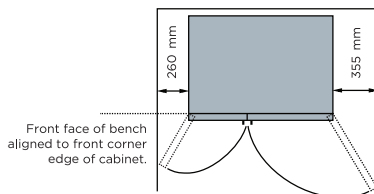

*Note: Doors are designed to sit proud of cabinetry (not flush). The clearances shown above are the recommended minimum clearances.*

#### Installing your refrigerator

Allow the following clearances for ease of installation, proper air circulation, and plumbing and electrical connections:

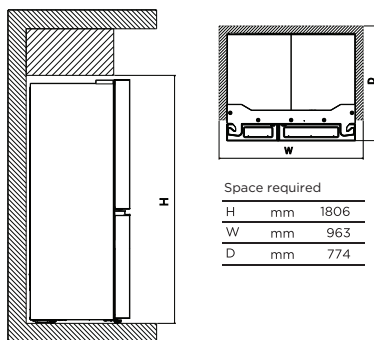

*Note: If your refrigerator is placed with the door hinge side against a wall, you may have to allow additional space so the door can be opened wider.*

#### Door opening

Your refrigerator should be positioned to allow easy access to a counter when removing food. For best use of refrigerator drawers and freezer baskets, the refrigerator should be in a position where both can be fully opened.



#### CAUTION

#### LED lighting

Your appliance is fitted with long life LED lighting. In the unlikely event the LED lights should fail, then the LED lights should be serviced by the service agent, to avoid a safety hazard. Refer to the warranty page for contact details.

### Cabinet Leveling & Refrigerator Door Alignment (if necessary)



- All four corners of the cabinet must rest firmly on the floor
- The front should be slightly elevated to
- ensure that doors close and seal properly.
- Doors should align with each other and be level.

Most of these conditions can be met by raising or lowering the adjustable front rollers.

#### To level the cabinet using the front rollers:

1. Lower anti-tip legs until they are both touching the floor. Use a pair of pliers to adjust
 


To raise: turn leg clockwise.  
To lower: turn leg counterclockwise.
2. Ensure both doors are bind-free with their seals touching the cabinet on all four sides and that cabinet is stable.

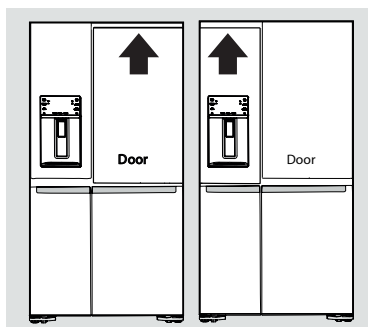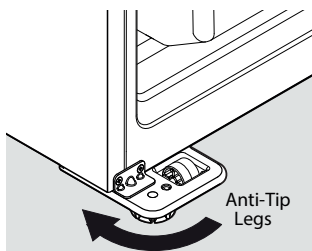

#### To make final door height adjustments:


1. Insert Electrolux 10mm wrench into the shaft of the lower hinge.

2. To lower door: turn adjustment screw clockwise.  
To raise door: turn adjustment screw counter clockwise.

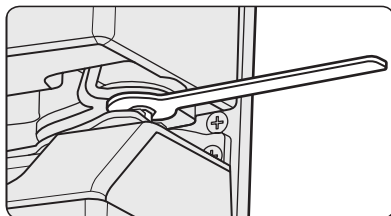

#### Flipper Mullion


Adjust Flipper Mullion for proper connection with the mullion guide by ensuring the flipper mullion is folded and perpendicular to the fresh food door. If the mullion guide is not in the correct position, it could prevent the door from closing completely.

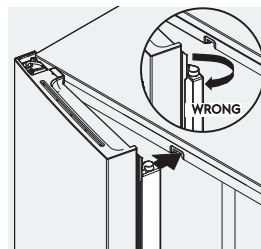

#### Bottom Doors Vertical Alignment (for Quattro Models)

In some cases the bottom doors might be slightly vertically misaligned. To correct this difference it may be used the C-Shaped Shim supplied with the unit.

The shim must be installed on the bottom hinge of the lower door lifting it to get access of the pin where the shim must be attached, as follows on the images.

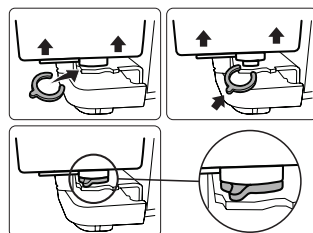

## 4. CONNECTING THE WATER SUPPLY

To avoid electric shock, which can cause death or severe personal injury, disconnect the refrigerator from electrical power before connecting a water supply line to the refrigerator.



### WARNING

#### To Avoid Property Damage:

- DO NOT install water supply tubing in areas where temperatures fall below freezing.
- Chemicals from a malfunctioning water softener can damage the ice maker. If your home has a water softening system, ensure the softener is maintained and working properly.



### IMPORTANT

Ensure that your water supply line connections comply with all local plumbing codes.

The appliance complies with the relevant backflow prevention requirements specified in AS/NZS 2845.1

#### Before Installing the Water Supply Line, You Will Need:

- Basic Tools: adjustable wrench, flat-blade screwdriver, and Phillips™ screwdriver
- The water dispenser and automatic ice maker require a drinkable water supply with a pressure range of between 206kPa and 689kPa (30PSI and 100PSI ). If the water supply is above 100psi a pressure limiting valve should be installed.
- A water supply to suit a ½" tap fitting is required adjacent to the refrigerator. It is recommended that a licensed plumber install a new water supply outlet nearer to the appliance should the tubing supplied not be long enough. It is not recommended that the tubing be extended as this could adversely affect the flow of water to the ice maker or water dispenser. If there is a risk of flow rate higher than the maximum flow rate 2.46 L/min, a flow controller should be installed.



### WARNING

Connect to potable water supply only. If using tank or bore water it is recommended to also use an external filter (not supplied). The new hose-sets supplied with the appliances must be used and old hose-sets should not be reused.



### WARNING

Never connect the appliance to a hot water supply. Do not use with water that is microbiologically unsafe or with water of unknown quality without adequate disinfection.

### To Connect Water Supply Line to Ice Maker Inlet Valve

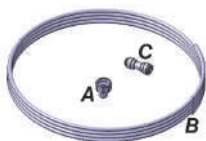


Figure 1

A - Adapter  $\frac{1}{2}$  to  $\frac{1}{4}$  inch to connect the water supply outlet to the water supply line.

B - Water supply line  $\frac{1}{4}$  inch with 3 meters in length.

C -  $\frac{1}{4}$  inch connector to connect the water supply line to the refrigerator tube.

1. Disconnect the refrigerator from the power source.
2. Attach the adapter (item A above) to the water line, connect the water supply line (item B) to the adapter (item A) while holding the other end of the water supply line in a bucket or sink. Turn on the water supply to eliminate air and clean the water supply line. Turn off the water supply.
3. Remove the plastic protector from the refrigerator tube and connect the water supply line (item B) to the refrigerator tube using the connector (item C) as shown in fig. Make sure the tubes are inserted completely into the connections.
4. Wrap excess water supply line behind refrigerator so that it does not vibrate with refrigerator operation. Do not twist the pipe.
5. Turn on the water supply, check that there are no leaks in the connections.
6. Reconnect the refrigerator to the power source.
7. The Ice Maker is factory-switched, within 24 hours your refrigerator will have produced ice, discard the first production.

*Note: Expect the first ice harvest within first 24 hours of unit operation. To prevent any issues concerning ice production, please ensure that all water lines are primed. See "Priming the water supply system" in the "AUTOMATIC ICE & WATER DISPENSER" section.*

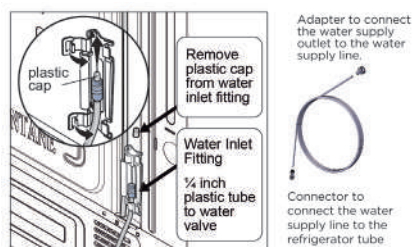


Figure 2

### **i** IMPORTANT

Your refrigerator's water supply system includes several tubing lines, a water filter, and a water valve. To ensure that your water dispenser work properly, this system must be completely filled with water when your refrigerator is first connected to the household water supply line.

#### Water Filter

The water filter should not be used on water that is micro biologically unsafe or with water of unknown quality. The service life of the filter may be reduced in water supplies that contain an excess of particles or other impurities.


Reduced flow rate is an indication that a new filter is required. Failure to replace the filter when required can affect the function of the ice maker. Service calls caused by a failure to replace the filter are not covered by warranty.

Replacement water filters are available from Electrolux Home Products Spare Parts Centres and can be posted to you for your convenience (refer to spare parts contact numbers on the warranty page).



## 5. CONTROL

### 5.1 External User interface

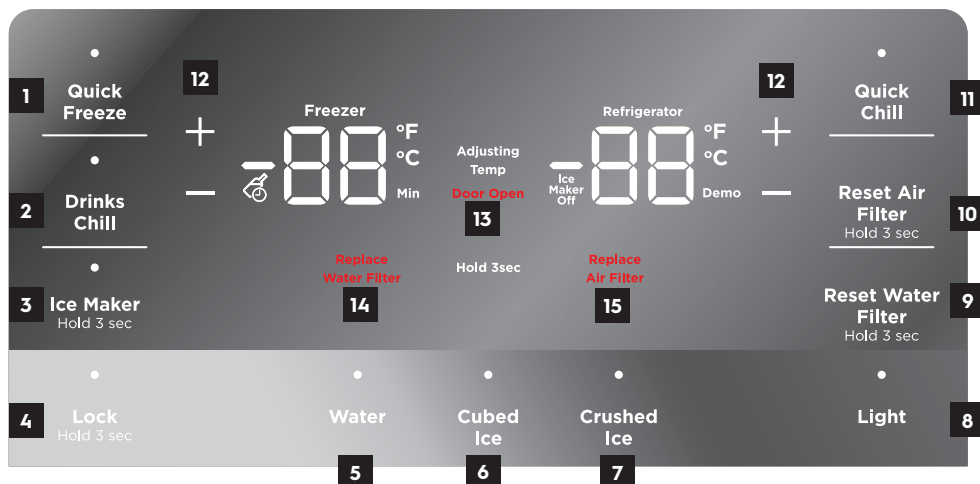

| BUTTON / ICON | DESCRIPTION                  | PRIMARY FUNCTION                                                                                                                                                                                                                                                                                   |
|---------------|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1             | <b>Quick Freeze (on/off)</b> | Activates a faster rate for freezing food in the freezer. Deactivates after 12 hours.                                                                                                                                                                                                              |
| 2             | <b>Drinks Chill</b>          | Quickly chills a drink inside the freezer compartment. Touch the Drinks Chill Key, a time value will display on the freezer temp display (in minutes) and can be changed using the +/- buttons. A tone will sound when the time has been input. Range is from 20-45 minutes in 5 minute intervals. |
| 3             | <b>Ice Maker</b>             | When LED is lit, the ice maker is on. When ice maker is in OFF state, the indicator will blink when dispensing ice. Press and hold for 3 seconds to turn ice maker on/off.                                                                                                                         |
| 4             | <b>Lock</b>                  | Press and hold for 3 seconds to enable/disable. While in the locked state, you will not be able to change any settings on the display nor dispense ice and water. The indicator will flash and an audible warning tone is played.                                                                  |
| 5             | <b>Water</b>                 | Press the "water" key to select water. An indicator light will be illuminated above the active feature.                                                                                                                                                                                            |
| 6             | <b>Cubed Ice</b>             | Press the "cube" key to select cubed ice. An indicator light will be illuminated above the active feature.                                                                                                                                                                                         |

| BUTTON / ICON | DESCRIPTION                 | PRIMARY FUNCTION                                                                                                                                                                                                       |
|---------------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7             | <b>Crushed Ice</b>          | Press the "crush" key to select crushed ice. An indicator light will be illuminated above the active feature.                                                                                                          |
| 8             | <b>LIGHT</b>                | Toggles dispenser light On and Off.                                                                                                                                                                                    |
| 9             | <b>Reset Water Filter</b>   | After replacing filter, press and hold for 3 seconds to reset.                                                                                                                                                         |
| 10            | <b>Reset Air Filter</b>     | After replacing filter, press and hold for 3 seconds to reset.                                                                                                                                                         |
| 11            | <b>Quick Chill</b>          | Quick chill is a faster rate for chilling food in the refrigerator compartment. Deactivates after 6 hours.                                                                                                             |
| 12            | <b>Adjusting Temp</b>       | Press either the + or - to adjust to desired temperature setting.<br><b>Freezer temp</b> - Control temperatures range From -23°C to -15°C.<br><b>Refrigerator temp</b> - Control temperatures range From +1°C to +7°C. |
| 13            | <b>Door Open</b>            | Illuminates and sounds an alarm when the door is left open for 5 minutes or more. It stays illuminated as long as the door is open. Pressing any key will mute and reset the alarm.                                    |
| 14            | <b>Replace Water Filter</b> | Display illuminates every 6 months or when filter needs replacing. Press and hold 'Reset Water Filter' for 3 seconds to reset.                                                                                         |
| 15            | <b>Replace Air Filter</b>   | Display illuminates every 6 months or when filter needs replacing. Press and hold 'Reset Air Filter' for 3 seconds to reset.                                                                                           |

## 5.2 TASTESEALFLEX control panel



| BUTTON / ICON | DESCRIPTION      | PRIMARY FUNCTION                                                                                                                                                           |
|---------------|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1             | Unlock           | The interface will automatically lock after 3 seconds without any interaction. Press and hold 3 seconds to unlock the interface. A tone will sound to confirm your choice. |
| 2             | Wine & Champagne | Choosing <b>Wine &amp; Champagne</b> will set TASTESEALFLEX temperature to 7°C. A tone will sound to confirm your choice.                                                  |
| 3             | Deli Snacks      | Choosing <b>Deli Snacks</b> will set TASTESEALFLEX temperature to 3°C. A tone will sound to confirm your choice.                                                           |
| 4             | Cold Drinks      | Choosing <b>Cold Drinks</b> will set TASTESEALFLEX temperature to 0°C. A tone will sound to confirm your choice.                                                           |
| 5             | Meat & Seafood   | Choosing <b>Meat &amp; Seafood</b> will set TASTESEALFLEX temperature to -2°C. A tone will sound to confirm your choice.                                                   |
| 6             | Freezer          | Choosing <b>Freezer</b> will set TASTESEALFLEX temperature to the same temperature as the freezer compartment. A tone will sound to confirm your choice.                   |

## 6. SETTING COOLING TEMPERATURES


*Note: The recommended settings for a product installed in a kitchen is 3°C for the fresh food compartment and -18°C for the freezer.*



### IMPORTANT

If your product has food freezing in the fresh food compartment, increase the temperature setting 1 or 2 degrees Celsius.

If you place food within 3 cm in front of the air ports, there may be the chance of freezing food.

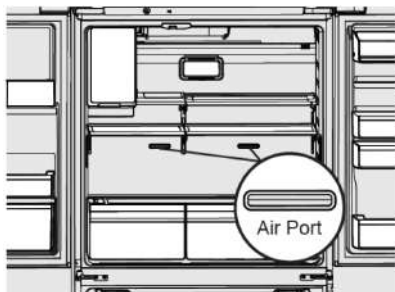

*Note: Control features and alarms may vary by model.*

### Alerts and Alarms

#### Water Filter

When illuminated, the water filter needs to be replaced. Change the water filter every 6 months or when 750 litres of water has been dispensed. To reset, press and hold button for 3 seconds. Tone will sound once it has been reset.

#### Air Filter Installation

First operation the refrigerator need to installation the air filter which storage at crisper left side and follow installation method as below. Carbon activated air filter

1. Remove plastic wrap.
2. Install filter according to your refrigerator's use&care guide.
3. Reset filter reminder light on your refrigerator.
4. Replace filter every 6 months.

When illuminated, air filter needs to be replaced. Change the air filter every 6 months. To reset, press and hold button for 3 seconds. Tone will sounds once it has been reset.

#### Door Open

If a door has been left open for 5 minutes or more, an alarm will sound and the door open indicator will illuminate on the display. The alarm can be turned off by closing the door or pressing any key. Control panel will return to normal operation after the door is closed.

#### Error Tone

An alarm will sound if the user tries to make a selection that is not available.

## 7. AUTOMATIC ICE & WATER DISPENSER

### Using the ice maker after installation

Before making ice for the first time, be sure to prime the water supply system. Air in new plumbing lines can result in two or three empty ice maker cycles. Furthermore, if the system is not flushed, the first ice cubes may be discolored or have an odd flavor.


### Priming the water supply system



#### CAUTION

For proper dispenser operation, recommended water supply pressure should fall between 206kPa and 689kPa (30PSI and 100PSI). Excessive pressure may cause the system to malfunction.

1. Begin filling the system by pressing and holding a drinking glass against the dispenser.
2. Keep the glass in this position until water comes out of the dispenser. It may take about 1½ minutes.
3. Continue dispensing water for about 4 minutes to flush the system and plumbing connections of any impurities (stopping to empty the glass as necessary).

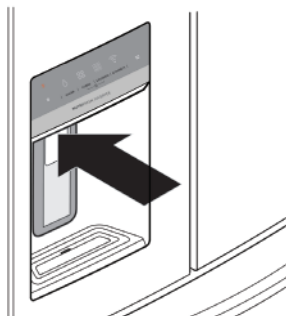

**Dispenser**

Note: The water dispenser has a built-in device that shuts off the water flow after three minutes of continuous use. To reset this shut-off device, simply release the dispenser paddle. Only the first 750 ml of dispensed water is chilled.



#### WARNING

Flushing system about 2 minutes after period of non-use exceeding 30 days

### Ice maker operation & care

After the refrigerator is installed properly and has cooled for several hours, the ice maker can produce ice within 24 hours. The ice maker will fill the ice bin from the rear. You must dispense some ice to force the ice forward in the bin. This will allow the bin to fill completely.

### Ice Maker and Storage Bin Capacity

This ice maker should produce 1 kg of ice per 24 hours. The ice bin will hold about 1.8 kg of ice.

### Turning the ice maker on and off



#### IMPORTANT

Your ice maker is turned on at the factory so it can work as soon as you install your refrigerator. If you cannot connect a water supply, set the ice maker's On/Off feature to Off; otherwise, the ice maker's fill valve may make a loud chattering noise when it attempts to operate without water.

Ice production is controlled by the ice maker's On/Off feature on the control panel. Pressing the On/Off feature turns the ice maker on & off.

*Note: The ice maker also has a built-in plastic signal arm that automatically stops ice production when the ice bin is full. This signal arm should not be used to manually stop the ice maker.*



#### IMPORTANT

Turning off the ice maker simply disables ice making. You will still be able to dispense existing ice, and you will still be able to dispense water.

On occasion, unusually small ice cubes may be noticed in the bucket or in dispensed ice. This could occur in normal operation of the ice maker. If you start seeing these more frequently, it may be an indication of low water pressure, or that the water filter needs to be replaced. As the water filter nears the end of its useful life and becomes clogged with particles, less water is delivered to the ice maker during each cycle. Remember, if it has been six months or longer since you last changed your water filter, replace the water filter with a new one. Poor quality household water may require the filter to be changed more frequently.

### Ice maker/dispenser tips

- If your refrigerator is not connected to a water supply or the water supply is turned off, turn off the ice maker as described in the previous section.
- The following sounds are normal when the ice maker is operating:
  - Motor running
  - Ice dropping into ice bin
  - Water valve opening or closing
  - Running water
- If you need a large quantity of ice at one time, it is best to get cubes directly from the ice bin.
- Ice cubes stored too long may develop an odd flavor. Empty the ice bin as explained below.
- When dispensing cubed ice, it is normal to have a small quantity of little pieces along with the whole cubes.
- To avoid splashing, dispense ice into your container before adding liquids.
- It is normal for ice to fill to the top of the ice bin.



#### CAUTION

If the water supply to your refrigerator is softened, be sure the softener is properly maintained. Chemicals from a water softener can damage the ice maker.

### Cleaning the ice maker


Clean the ice maker and ice bin at regular intervals, especially prior to vacation or moving.

1. Turn off the icemaker.
2. Remove the ice bin by pulling straight out.
3. Empty and carefully clean the ice bin with mild detergent. Do not use harsh or abrasive cleaners. Do not place in dishwasher. Rinse with clear water.
4. Allow the ice bin to dry completely before placing it back into the freezer.
5. Place ice bin back into position. Turn the ice maker on.

### Remove and empty the ice bin if:

- An extended power failure (one hour or longer) causes ice cubes in the ice bin to melt and refreeze together after power is restored, jamming the dispenser mechanism.

- You do not use the ice dispenser frequently. Ice cubes will freeze together in the bin, jamming the dispenser mechanism.

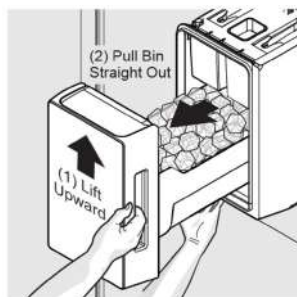

### Removing Ice Bin

Remove the ice bin and shake to loosen the cubes or clean as explained above.



#### CAUTION


NEVER use an ice pick or similar sharp instrument to break up the ice. This could damage the ice bin and dispenser mechanism.

To loosen stuck ice, use warm water. Before replacing the ice bin, make sure it is completely dry.



#### IMPORTANT

When removing or replacing the ice bin, avoid rotating the auger in the ice bin. If the auger is accidentally rotated, you must realign the auger by turning it in 45 degree turns (see below) until the ice bin fits into place with the drive mechanism. If the auger is not properly aligned when replacing the ice bin, the refrigerator will not dispense ice. The fresh food door also may not close properly causing warm air to leak into the fresh food compartment.

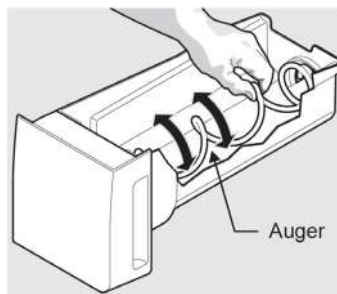

### Adjusting the Ice Bin Auger

## 8. STORAGE FEATURES



### CAUTION

To avoid personal injury or property damage, handle tempered glass shelves carefully. Shelves may break suddenly if nicked, scratched, or exposed to sudden temperature change. Allow the glass shelves to stabilize to room temperature before cleaning. Do not wash in dishwasher.


You can easily adjust shelf positions in the fresh food compartments to suit your needs. The shelves have mounting brackets that attach to slotted supports at the rear of each compartment.

#### To change a shelf position:

1. Remove all food from shelf.
2. Lift the front edge up and pull the shelf out.
3. Replace by inserting the mounting bracket hooks into the desired support slots.
4. Lower the shelf and lock into position.

#### To adjust the flip shelf:


1. Remove food from shelf.
2. Lift the right side edge of shelf upwards and push to the left towards ice maker.

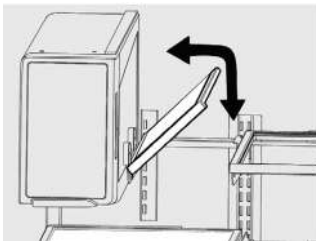

**Flip Shelf**


#### To adjust the slide-under/flip shelf:

1. Pull front half shelf forward until its back drops down, then gently push front half shelf back and under back half shelf.

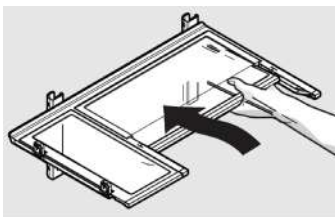

**Slide-Under/Flip Shelf**

2. With front half fully below back half, lift front of shelf to flip it upwards toward the back of the cabinet.

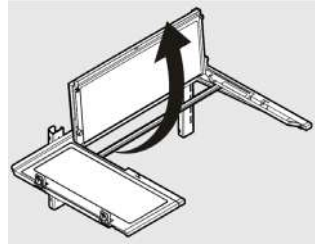

**Slide-Under/Flip Shelf**

### Drawers


Your refrigerator includes a variety of storage drawers.

#### Crisper (with automatic humidity control)

Crisper drawers are designed for storing fruits, vegetables, and other fresh produce. Crispers have an auto humidity control (with replaceable membrane) on the side of each crisper under the humidity control cover.

#### To remove the auto humidity control membrane:


1. Reach to back of humidity control cover.
2. Pull up on cover.
3. Pull cover towards back of cabinet and remove.
4. Replace humidity membrane.
5. Replace cover by reversing the steps above. Repeat for both crispers.

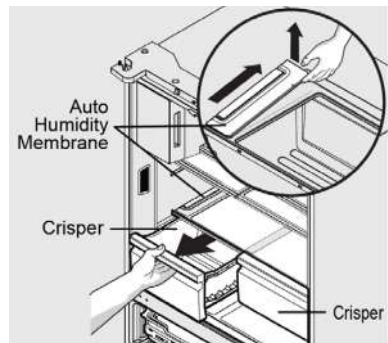

**Opening the Crisper Drawer**


**To remove crisper for cleaning:**

1. Pull the drawer out until it stops.
2. Lift the front slightly and remove the drawer.

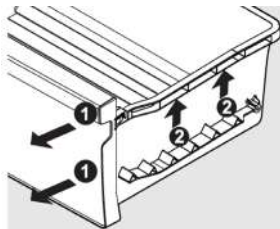**Removing Crisper****Recessed SnackZone**

This drawer is ideal for storage of deli meats and cheese.

Slide back the cover to allow access to the drawers.

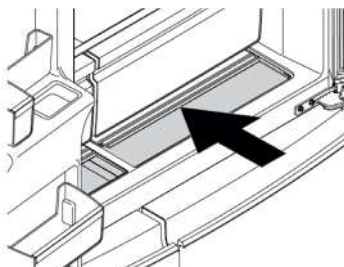**Opening the SnackZone****Doors****Storage bins**

The doors to your fresh food compartment use a system of modular storage bins. All of these bins are removable for easy cleaning. Bins can be adjusted to your needs.

Door bins are ideal for storing jars, bottles, cans, and large drink containers. They also enable quick selection of frequently used items.

**Adjustable door bins**

Some models have adjustable door bins that can be moved to suit individual needs.

To adjust the collapsible door bin:

1. Make sure bin is securely seated on rail in door.
2. Grab one side of bin and place other hand on adjustable side.
3. Pull on side of bin until the bin is adjusted to desired width.


*Note: It can be difficult to pull out the collapsible bin. Some force may be required.*

**To move door bin along a rail:**

1. Tilt bin up so the back of the bin is off the door but the hook is still engaged.
2. Slide bin along rail to desired position.
3. Lower bin back into place.

**To move door bin from rail to rail:**

1. Lift bin up disengaging the hook.
2. Move bin to desired rail location.
3. Push bin hook into rail engaging the hook.

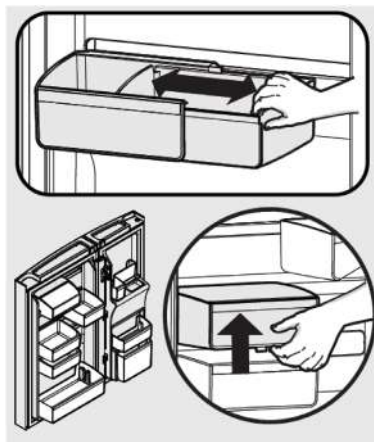**Adjustable Door Bins**





## Freezer storage


### To remove freezer and FlexSpace shelves and drawers:

All freezer and FlexSpace shelves and drawers are removable.


1. Open doors completely to gain access to shelves/drawers.
2. Pull the shelf/drawer to the stopper. Lift up and pull to remove it from the cabinet.
3. Reverse the steps to reinstall shelf/drawer.

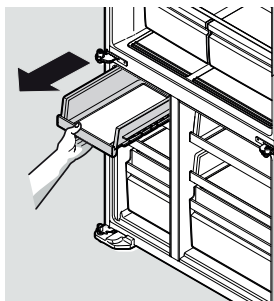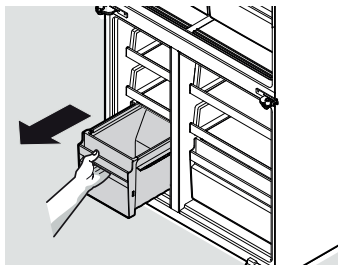

The middle drawers in the freezer and FlexSpace™ can be mounted up to three height positions and can also invert 90 degrees allowing storage of bottles in the FlexSpace™.

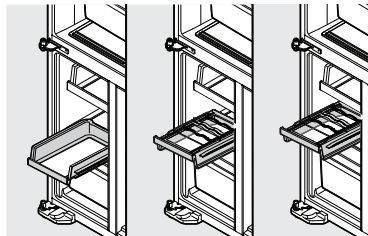

**Shelves in 3 Height Positions & Inverted**

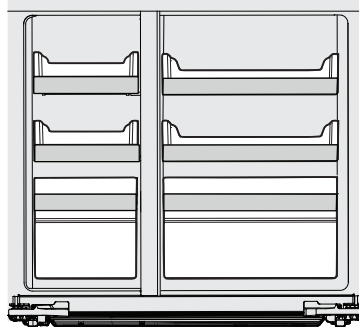

**Possible Shelf Configuration Example**



### IMPORTANT

There are wheels on the back of all shelves. Make sure all wheels are aligned on their respective tracks for proper function. If shelf is not aligned properly, it will cause problems with the door operation.

## 9. GENERAL INFORMATION

### 9.1 CLEANING YOUR REFRIGERATOR



#### WARNING

**BEFORE CLEANING:** Turn the refrigerator off at the power point and unplug the cord to prevent any chance of electrocuting yourself.

Doors and exterior (white and silver):

You should only clean the doors with lukewarm soapy water and a soft cloth.

Stainless Steel:

Your stainless steel refrigerator is manufactured from mark-resistant stainless steel. This stainless steel has a special advanced protective coating that eases the removal of marks such as fingerprints and water spots. To keep its appearance, clean it regularly with lukewarm soapy water and a soft cloth.



#### CAUTION

Never use stainless steel cleaners, abrasive pads or other cleaners that will scratch the surface. Damage to the appliance after delivery is not covered by your warranty.

#### Interior

Clean the inside of your refrigerator regularly with a soft cloth, unscented mild soap and lukewarm water. Thoroughly dry all surfaces and removable parts and avoid getting water on the controls. Replace removable parts, plug power cord in and switch the power on before returning the food.

#### Door seals

Always keep door seals clean by washing them with a mild detergent and warm water, followed by a thorough drying. Sticky food and drink can cause seals to stick to the cabinet and tear when you open the door.

Never use hot water, solvents, commercial kitchen cleaners, aerosol cleaners, metal polishes, caustic or abrasive cleaners, or scourers to clean your refrigerator. Many commercially available cleaning products and detergents contain solvents that will damage your refrigerator. Use only a soft cloth with an unscented mild soap and lukewarm water.



#### CAUTION

To clean a crisper or freezer bin with telescopic extension slides, simply wipe with a damp cloth and warm soapy water. Never immerse the cover in water, as this could affect the operation of the slide.

#### Switching off your refrigerator

If you switch off your refrigerator for an extended period, follow these steps to reduce the chances of mould.

1. Remove all food.
2. Remove the power plug from the power point.
3. Thoroughly clean and dry the Interior.
4. Ensure that all the doors are wedged open slightly for air circulation.

### 9.2 CHANGING THE FILTER


#### Air Filter (select models)

The air filter is located in the top center of the fresh food compartment.

#### Replacing your Air Filter

To ensure optimal filtering of refrigerator odors, you should change the air filter six months (The filter status light on the Touch Panel prompts you to replace the filter after six months).

1. Remove the air filter cover by squeezing the sides of the cover together and removing from liner.
2. Remove the old filter and discard it.
3. Unpack the new filter and slide it into the housing. The open face must (carbon media) of the filter should be installed facing the air port (hole) in the multiflow.
4. Replace the air filter cover by squeezing the sides and snapping it back into place.
5. Press and hold the "Reset Air Filter" button on the control panel for three seconds. When the LED turns off, the status has been reset.

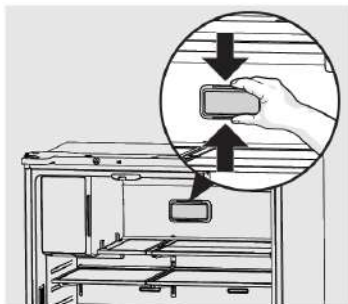


### Water Filter

Your refrigerator is equipped with a water filtering system. The water filtering system filters all dispensed drinking water, as well as the water used to produce ice. The water filter is located at the top right side of the fresh food compartment.

In general, you should change the water filter every six months to ensure the highest possible water quality. Water filter status on the user interface prompts you to replace the filter after a standard amount of water (750 litres) has flowed through the system.

If your refrigerator has not been used for a period of time (during moving for example), change the filter before reinstalling the refrigerator.

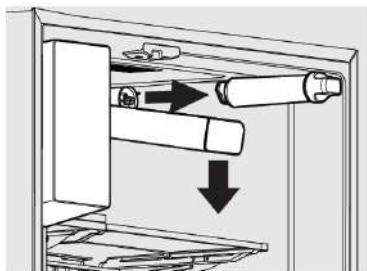

*Note: When ordering your replacement filter, please reorder the same filter type that is currently in your refrigerator.*



### WARNING

Use the appliance with water filter supplied by Electrolux Home Products Pty Ltd or its authorized service agent only.

For correct operation of this appliance it is essential to observe the manufacturer's instructions.

### Replacing the Water Filter

**To Remove:** Pull cover towards you and cover will drop down and allow access to filter.

**To Reinstall:** Push cover up towards liner and then push towards rear of cabinet. Filter cover will snap back into place.

It is not necessary to turn the water supply off to change the filter. Be ready to wipe up any small amounts of water released during the filter replacement.

1. Ensure that the ice maker is turned off
2. Remove the filter by turning anti-clockwise 180°
  - Slide the old water filter cartridge straight out of the housing and discard it.
3. Unwrap the new filter cartridge and using the alignment guide, slide it gently into filter housing until it stops against the filter connection at the back of the housing.
4. Engage the filter by firmly rotating clockwise until the filter snaps into position (once engaged the filter cannot be rotated further).
5. Press a drinking glass against the water dispenser while checking for any leaks at the filter housing. Any spurts and sputters that occur as the system purges air out of the dispenser system are normal.
6. After filling one glass of water, continue flushing the system for about four minutes.
7. Turn on the ice maker.
8. When the filter has been replaced press and hold the 'Reset Water Filter' button for three seconds to reset the filter replace timer.
9. Replace filter cover by pushing up and snapping into place.

10. FOOD STORAGE GUIDE

| CATEGORY           | PRODUCT                                                                                                                                                    | RECOMMENDED STORAGE TIMES FOR FRESH FOODS * |                                                              |                   | STORAGE TIPS                                                                                                                                                                                                                                                             |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|--------------------------------------------------------------|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                    |                                                                                                                                                            | REFRIGERATOR                                | ULTRA CHILL                                                  | FREEZER           |                                                                                                                                                                                                                                                                          |
| MEAT               | Sausages and Mince                                                                                                                                         | 1-2 Days                                    | 3-5 Days                                                     | 2-3 Months        | Keep cold meat at the back of the refrigerator where it is coldest.<br>Plastic can cause meat to sweat if stored in refrigerator for more than a day.<br>Roast can take up to 48 hours to defrost properly, transfer frozen roast to the refrigerator 2 days before use. |
|                    | Chops and Steak                                                                                                                                            | 3-4 Days                                    | 5-7 Days                                                     | 4-6 Months        |                                                                                                                                                                                                                                                                          |
|                    | Cold Meats                                                                                                                                                 | 3-5 Days                                    | 5-7 Days                                                     | 4-6 Months        |                                                                                                                                                                                                                                                                          |
|                    | Roasts                                                                                                                                                     | 3-5 Days                                    | 1 week                                                       | 12 Months         |                                                                                                                                                                                                                                                                          |
| POULTRY            | Chicken                                                                                                                                                    | 1-2 Days                                    | 5-7 Days                                                     | 2 Months          | If poultry takes on a smell or colour you are unsure about it is best to throw it out.<br>Whole eggs are not suitable for freezing, slightly beaten eggs may be frozen for four months.                                                                                  |
|                    | Roast Chicken                                                                                                                                              | 3-5 Days                                    | 1 week                                                       | 12 Months         |                                                                                                                                                                                                                                                                          |
|                    | Eggs                                                                                                                                                       | 6 Weeks                                     | Not Suitable                                                 | Not Suitable      |                                                                                                                                                                                                                                                                          |
| SEAFOOD            | Whole fish and filets                                                                                                                                      | 2-3 Days                                    | 5-7 Days                                                     | 2 Months          | Store in an airtight container or foil.<br><br>Never freeze prawns in salty water as this will dehydrate the flesh.                                                                                                                                                      |
|                    | Lobster and Crab                                                                                                                                           | 1-2 Days                                    | 3-5 Days                                                     | 2 Months          |                                                                                                                                                                                                                                                                          |
|                    | Prawns                                                                                                                                                     | 1-2 Days                                    | 3-5 Days                                                     | 2 Months          |                                                                                                                                                                                                                                                                          |
| DAIRY              | Milk                                                                                                                                                       | Until Expiry Date                           | Not Suitable                                                 | Not Suitable      | If dairy takes on a smell or colour and you are unsure about it, it is best to throw it out.                                                                                                                                                                             |
|                    | Yoghurt                                                                                                                                                    | 7- 10 Days                                  | Not Suitable                                                 | Not Suitable      |                                                                                                                                                                                                                                                                          |
|                    | Hard Cheeses                                                                                                                                               | 2 Weeks – 2 Months                          | 1-2 Months                                                   | 2 Months (Grated) | Depending on the variety hard cheese can last from 2 weeks to 2 months.                                                                                                                                                                                                  |
|                    | Soft Cheeses                                                                                                                                               | 1-2 Weeks                                   | 2-4 Weeks *                                                  | Not Suitable      | * Texture may change depending of the type of soft cheese                                                                                                                                                                                                                |
|                    | Butter                                                                                                                                                     | 8 Weeks                                     | 3-4 Months                                                   | 12 Months         |                                                                                                                                                                                                                                                                          |
| FRUIT & VEGETABLES | Every fruit and vegetable has a different shelf life. Some stay fresh for a couple of days e.g. beans, others can last for a couple of months e.g. onions. | Not Suitable                                | 8-12 Months When freezing chop and blanch in small portions. |                   | Keep vegetables in the crisper and away from the air vents to avoid freezing.                                                                                                                                                                                            |
|                    |                                                                                                                                                            |                                             |                                                              |                   | If you wash fruit and vegetables before storing them make sure they are dry or wrap in absorbent paper before storing in the refrigerator as this can make them susceptible to rotting.                                                                                  |
|                    |                                                                                                                                                            |                                             |                                                              |                   | Try to keep fruit and vegetables separated as fruits that give off high levels of ethylene (the ripening agent) can prematurely ripen and spoil surrounding vegetables                                                                                                   |

 **IMPORTANT**

\* Please note, use this information as a guide only, actual storage times will vary depending on how you use your refrigerator.

## 11. TROUBLESHOOTING

| Concern                                     | Potential Cause                                                                                                                                                                                                                                                                                                                                                                         | Common Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Automatic Ice Maker</b>                  |                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Ice maker is not making any ice.            | <ul style="list-style-type: none"> <li>• Ice maker is turned off.</li> <li>• Refrigerator is not connected to water line or water valve is not open.</li> <li>• The water supply line is kinked.</li> <li>• The water filter is not seated properly.</li> <li>• The water filter may be clogged with foreign material.</li> </ul>                                                       | <ul style="list-style-type: none"> <li>• Turn on ice maker. For the fresh food ice maker, press ice maker on-off button once.</li> <li>• Connect the unit to the household water supply and ensure the water valve is open.</li> <li>• Ensure that the supply line does not kink when the refrigerator is pushed into place against the wall.</li> <li>• Remove and re-install the water filter. Be sure to seat it fully into the locked position.</li> <li>• If water dispenses slowly or not at all, or if the filter is six months old or older, it should be replaced.</li> </ul>                                        |
| Ice maker is not making enough ice.         | <ul style="list-style-type: none"> <li>• Ice maker is producing less ice than you expect</li> <li>• The water filter may be clogged with foreign material.</li> <li>• The water supply line is kinked.</li> <li>• Water pressure is extremely low. Cut-off and cut-on pressures are too low (well systems only).</li> <li>• Reverse osmosis system is in regenerative phase.</li> </ul> | <ul style="list-style-type: none"> <li>• The ice maker will produce approximately 1 kg of ice every 24 hours depending on usage conditions.</li> <li>• If water dispenses slower than normal, or if the filter is six months old or older, it should be replaced.</li> <li>• Ensure that the supply line does not kink when the refrigerator is pushed into place against the wall.</li> <li>• Have someone turn up the cut-off and cut-on pressure on the water pump system (well systems only).</li> <li>• It is normal for a reverse osmosis system to be below 137 kPa (20 psi) during the regenerative phase.</li> </ul> |
| Ice cubes are freezing together.            | <ul style="list-style-type: none"> <li>• Ice cubes are not being used frequently enough or interruption of power for prolonged time.</li> <li>• Ice cubes are hollow (shells of ice with water inside). The hollow cubes break open in the bin and leak their water onto existing ice, which causes it to freeze together.</li> </ul>                                                   | <ul style="list-style-type: none"> <li>• Remove ice container and discard ice. The ice maker will produce fresh supply. Ice should be used at least twice weekly to keep the cubes separated.</li> <li>• This generally occurs when the ice maker does not get enough water. This is usually the result of a clogged water filter or restricted water supply. Replace the water filter and if the condition still occurs, check to see if the water valve is not turned on all the way or if there is a kinked water supply line.</li> </ul>                                                                                  |
| <b>Dispenser (Ice &amp; Water)</b>          |                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Dispenser (Ice & water) not dispensing ice. | <ul style="list-style-type: none"> <li>• There is no ice in the bin to be dispensed.</li> <li>• The refrigerator doors are not completely closed.</li> <li>• Dispenser paddle has been pressed too long and the dispenser motor has overheated.</li> </ul>                                                                                                                              | <ul style="list-style-type: none"> <li>• See the "Ice maker is not making any ice" section.</li> <li>• Be sure the refrigerator doors are completely closed.</li> <li>• The motor overload protector will reset in about three minutes and then ice can be dispensed.</li> </ul>                                                                                                                                                                                                                                                                                                                                              |

| Concern                                       | Potential Cause                                                                                                                                                                                                                                                                                                        | Common Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Dispenser (Ice &amp; Water)</b>            |                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Ice dispenser is jammed.                      | <ul style="list-style-type: none"> <li>Ice has melted and frozen around auger due to infrequent use, temperature fluctuations, and/or power outages.</li> <li>Ice cubes are jammed between ice maker and back of ice container.</li> </ul>                                                                             | <ul style="list-style-type: none"> <li>Remove ice container, thaw, and empty the contents. Clean container, wipe dry, and replace in proper position. When new ice is made, dispenser should operate.</li> <li>Remove ice cubes that are jamming the dispenser.</li> </ul>                                                                                                                                                                                                                                                                                                                                   |
| Dispenser (Ice & water) not dispensing water. | <ul style="list-style-type: none"> <li>Dispenser (Ice &amp; water) not dispensing water.</li> </ul>                                                                                                                                                                                                                    | <ul style="list-style-type: none"> <li>Remove and reinstall the water filter. Be sure to rotate it to the right until it stops and the grip end is vertical.</li> <li>Replace filter cartridge. Be sure to rotate it to the right until it stops and the grip end is vertical.</li> <li>Open household water line valve. See CONCERN column AUTOMATIC ICE MAKER.</li> </ul>                                                                                                                                                                                                                                  |
| Water not cold enough.                        | <ul style="list-style-type: none"> <li>As warmer tap water goes through the filter and enters the water supply system, the chilled water is pushed through to the dispenser. Once the chilled water is used up, it will take several hours to bring the freshly replaced water to a cooler temperature.</li> </ul>     | <ul style="list-style-type: none"> <li>Add ice to cup or container before dispensing water.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Water has an odd taste and/or odor.           | <ul style="list-style-type: none"> <li>Water has not been dispensed for an extended period of time.</li> <li>Unit not properly connected to cold water line.</li> </ul>                                                                                                                                                | <ul style="list-style-type: none"> <li>Draw and discard 10-12 glasses of water to freshen the supply.</li> <li>Connect unit to cold water line that supplies water to the kitchen faucet.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Opening/Closing Of Doors</b>               |                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Door(s) will not close.                       | <ul style="list-style-type: none"> <li>Door was closed too hard, causing other door to open slightly.</li> <li>Refrigerator is not level. It rocks on the floor when moved slightly.</li> <li>Refrigerator is touching a wall or cabinet.</li> <li>Check gasket and cabinet interface for any obstructions.</li> </ul> | <ul style="list-style-type: none"> <li>Close both doors gently.</li> <li>Ensure floor is level and solid, and can adequately support the refrigerator. Contact a carpenter to correct a sagging or sloping floor.</li> <li>Ensure floor is level and solid, and can adequately support the refrigerator. Contact a carpenter to correct a sagging or sloping floor.</li> <li>Clean the refrigerator door gaskets and interface with warm, soapy water to remove any grease, dirt and grime from the surface. Wipe clean with a dry cloth. Inspect the gasket to make sure it is thoroughly clean.</li> </ul> |

| Concern                                                        | Potential Cause                                                                                                                                                                                                      | Common Solution                                                                                                                                                                                                                                                                                                                                                               |
|----------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Running of Refrigerator</b>                                 |                                                                                                                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                               |
| Compressor does not run.                                       | <ul style="list-style-type: none"> <li>Refrigerator is in defrost cycle.</li> <li>Plug at electrical outlet is disconnected.</li> <li>House fuse blown or tripped circuit breaker.</li> <li>Power outage.</li> </ul> | <ul style="list-style-type: none"> <li>This is normal for a fully automatic defrost refrigerator. The defrost cycle occurs periodically, lasting about 30 minutes.</li> <li>Ensure plug is tightly pushed into outlet.</li> <li>Check/replace fuse with a 15 amp time-delay fuse. Reset circuit breaker.</li> <li>Check house lights. Call local electric company.</li> </ul> |
| Refrigerator seems to run too much or too long.                | <ul style="list-style-type: none"> <li>Your variable speed compressor is designed to run 100% of the time except during the defrost cycle. At times it will run faster, such as after a defrost cycle.</li> </ul>    | <ul style="list-style-type: none"> <li>It is normal for the compressor to run continuously except during defrost mode.</li> </ul>                                                                                                                                                                                                                                             |
| <b>Digital Temperature Setting Display</b>                     |                                                                                                                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                               |
| Digital temperature displays an error.                         | <ul style="list-style-type: none"> <li>Electronic control system has detected a performance problem.</li> </ul>                                                                                                      | <ul style="list-style-type: none"> <li>Call your Electrolux service representative, who can interpret any messages or number codes flashing on the digital displays.</li> </ul>                                                                                                                                                                                               |
| <b>Water/Moisture/Frost Inside Refrigerator</b>                |                                                                                                                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                               |
| Moisture collects on inside of refrigerator walls.             | <ul style="list-style-type: none"> <li>Weather is hot and humid.</li> <li>Flipper mullion</li> </ul>                                                                                                                 | <ul style="list-style-type: none"> <li>The rate of frost buildup and internal sweating increases.</li> <li>Adjust flipper mullion. (See "To adjust the flipper mullion" in the Installation section.)</li> </ul>                                                                                                                                                              |
| <b>Water/Moisture/Frost Outside Refrigerator</b>               |                                                                                                                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                               |
| Moisture collects on outside of refrigerator or between doors. | <ul style="list-style-type: none"> <li>Weather is humid.</li> </ul>                                                                                                                                                  | <ul style="list-style-type: none"> <li>This is normal in humid weather. When humidity is lower, the moisture should disappear.</li> </ul>                                                                                                                                                                                                                                     |
| <b>Food in Fresh Food Compartment</b>                          |                                                                                                                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                               |
| Food is freezing.                                              | <ul style="list-style-type: none"> <li>Temperature setting is too low.</li> <li>Temperature sensor is covered by food (right side of fresh food area).</li> <li>Food is covering the air ports.</li> </ul>           | <ul style="list-style-type: none"> <li>Move the setting to a higher degree.</li> <li>Allow space for air flow to the sensor.</li> <li>Allow space between the air ports and the food.</li> </ul>                                                                                                                                                                              |

## NOTE



| المشكلة                                                   | السبب المحتمل                                                                                                                                                                                                            | الحل الشائع                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>تشغيل ثلاجتك</b>                                       |                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                  |
| الضاغط لا يعمل.                                           | <ul style="list-style-type: none"> <li>• الثلاجة في دورة تذبذب.</li> <li>• تم فصل القابس من مأخذ التيار الكهربائي.</li> <li>• مصهر المبيت تالف أو قاطع الدائرة متوقف.</li> <li>• انقطاع التيار الكهربائي.</li> </ul>     | <ul style="list-style-type: none"> <li>• يُعد هذا أمرًا طبيعيًا لأي ثلاجة مزودة بخاصية التذبذب الأوتوماتيكي للثلج بشكل كامل. تحدث دورة إذابة الثلج بشكل دوري، وتستمر لمدة 30 دقيقة تقريبًا.</li> <li>• تأكد من وضع القابس بإحكام في منفذ الكهرباء.</li> <li>• افحص / استبدل المصهر بمصهر إعاقه زمنية بقدرة 15 أمبير. أعد ضبط قاطع الدائرة.</li> <li>• افحص أضواء المبيت. اتصل بشركة الكهرباء المحلية.</li> </ul> |
| يبدو أن الثلاجة تعمل كثيرًا أو لفترة طويلة جدًا.          | <ul style="list-style-type: none"> <li>• تم تصميم الضاغط متغير السرعة ليعمل في كافة الأوقات باستثناء دورة إذابة الثلج، وسيعمل في بعض الأحيان بشكل أسرع، كما هو الحال بعد دورة إذابة الثلج.</li> </ul>                    | <ul style="list-style-type: none"> <li>• من الطبيعي أن يعمل الضاغط بشكل مستمر إلا في وضع إذابة الثلج.</li> </ul>                                                                                                                                                                                                                                                                                                 |
| <b>الشاشة الرقمية لإعداد درجة الحرارة</b>                 |                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                  |
| تعرض الشاشة الرقمية لدرجة الحرارة خطأ.                    | <ul style="list-style-type: none"> <li>• اكتشف نظام التحكم الإلكتروني مشكلة في الأداء.</li> </ul>                                                                                                                        | <ul style="list-style-type: none"> <li>• اتصل بوكيل خدمة Electrolux الخاص بك، والذي يمكنه تفسير أي رسائل أو أرقام تومض على الشاشات الرقمية.</li> </ul>                                                                                                                                                                                                                                                           |
| <b>الماء / الرطوبة / الصقيع داخل الثلاجة</b>              |                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                  |
| تتجمع الرطوبة على جدران الثلاجة من الداخل.                | <ul style="list-style-type: none"> <li>• الطقس حار ورطب.</li> <li>• عمود التقسيم القلاب</li> </ul>                                                                                                                       | <ul style="list-style-type: none"> <li>• يزداد معدل تراكم الصقيع والتعرق الداخلي.</li> <li>• اضبط عمود التقسيم القلاب. (انظر "ضبط عمود التقسيم القلاب" في قسم التنبيهات).</li> </ul>                                                                                                                                                                                                                             |
| يُجمِع الماء على الجانب السفلي يغطاه الدرج.               | <ul style="list-style-type: none"> <li>• تحتوي الخضروات على رطوبة وتطلقها.</li> </ul>                                                                                                                                    | <ul style="list-style-type: none"> <li>• ليس من غير المعتاد وجود رطوبة على الجانب السفلي من الغطاء.</li> </ul>                                                                                                                                                                                                                                                                                                   |
| <b>الماء / الرطوبة / الصقيع خارج الثلاجة</b>              |                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                  |
| تتجمع الرطوبة على جدران الثلاجة من الخارج أو بين الأبواب. | <ul style="list-style-type: none"> <li>• الطقس رطب.</li> </ul>                                                                                                                                                           | <ul style="list-style-type: none"> <li>• هذا أمر طبيعي في الطقس الرطب، وعندما تنخفض نسبة الرطوبة في الجو، فستختفي الرطوبة بالثلاجة.</li> </ul>                                                                                                                                                                                                                                                                   |
| <b>الأطعمة في حجرة الأطعمة الطازجة</b>                    |                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                  |
| الأطعمة تتجمد.                                            | <ul style="list-style-type: none"> <li>• إعداد درجة الحرارة منخفضًا للغاية.</li> <li>• مستشعر درجة الحرارة مغطى بالطعام (الجانب الأيمن من الجزء المخصص للأطعمة الطازجة).</li> <li>• الطعام يغطي منافذ الهواء.</li> </ul> | <ul style="list-style-type: none"> <li>• انقل إعداد درجة الحرارة إلى درجة أعلى.</li> <li>• اترك مساحة لتدقيق الهواء إلى المستشعر.</li> <li>• اترك مساحة بين منافذ الهواء والأطعمة.</li> </ul>                                                                                                                                                                                                                    |

| المشكلة                            | السبب المحتمل                                                                                                                                                                                                                                                                      | الحل الشائع                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>الموزع (الثلج والماء)</b>       |                                                                                                                                                                                                                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| موزع الثلج مسدودًا.                | <ul style="list-style-type: none"> <li>ذاب الثلج وتجمد حول البريمة بسبب الاستخدام القليل وتقلبات درجات الحرارة و / أو انقطاع التيار الكهربائي.</li> <li>تتكسد مكعبات الثلج بين صانع الثلج والجزء الخلفي من وعاء الثلج.</li> </ul>                                                  | <ul style="list-style-type: none"> <li>أزل وعاء الثلج وقم بتدويره وإفراغ المحتويات. نظّف الوعاء وجففه وأعد تركيبه في وضع مناسب. ينبغي أن يعمل الموزع عند صنع ثلج جديد.</li> <li>أزل مكعبات الثلج التي تسد الموزع.</li> </ul>                                                                                                                                                                                                                                                                                  |
| موزع (الثلج والماء) لا يوزع الماء. | موزع (الثلج والماء) لا يوزع الماء.                                                                                                                                                                                                                                                 | <ul style="list-style-type: none"> <li>أزل فلتر المياه وأعد تركيبه، وتأكد من تدويرها نحو اليمين حتى تتوقف ويكون طرف المقبض عموديًا.</li> <li>استبدل خرطوشة الفلتر. وتأكد من تدويرها نحو اليمين حتى تتوقف ويكون طرف المقبض عموديًا.</li> <li>افتح صمام خط المياه المنزلية. انظر عمود "المشكلة" - "صانع الثلج الأتوماتيكي"</li> </ul>                                                                                                                                                                           |
| المياه ليست باردة بشكل كافٍ.       | <ul style="list-style-type: none"> <li>يتم دفع الماء البارد إلى الموزع عندما يمر ماء الصنبور الأكثر دفئًا عبر الفلتر ويدخل إلى نظام إمداد المياه. وبمجرد استخدام الماء المبرد، سوف يستغرق الأمر عدة ساعات حتى تصير درجة حرارة المياه الجديدة أكثر برودة.</li> </ul>                | <ul style="list-style-type: none"> <li>أضف الثلج إلى الكوب أو الوعاء قبل توزيع المياه.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                             |
| الماء له طعم و / أو رائحة غريبة.   | <ul style="list-style-type: none"> <li>لم يتم توزيع المياه لفترة زمنية طويلة.</li> <li>الوحدة غير متصلة بشكل صحيح بخط الماء الخارج.</li> </ul>                                                                                                                                     | <ul style="list-style-type: none"> <li>اسحب مقدار 10 - 12 كوبًا من الماء وتخلص منها لتجديد الإمداد.</li> <li>وصِّل الوحدة بخط الماء البارد الذي يزود صنبور المطبخ بالمياه.</li> </ul>                                                                                                                                                                                                                                                                                                                         |
| <b>فتح / إغلاق البواب</b>          |                                                                                                                                                                                                                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| لا يتم إغلاق الباب (الأبواب).      | <ul style="list-style-type: none"> <li>تم إغلاق الباب بقوة، مما تسبب في فتح الباب الآخر قليلاً.</li> <li>الثلاجة غير مستوية، حيث تتأرجح على الأرض عندما تتحرك قليلاً.</li> <li>الثلاجة تلامس جدارًا أو خزانة.</li> <li>افحص الجوانب والواجهة الخزانة بحثًا عن أي عوائق.</li> </ul> | <ul style="list-style-type: none"> <li>أغلق كلا البابين برفق.</li> <li>تأكد من أن الأرضية مستوية وصلبة، ويمكن أن تدعم الثلاجة بشكل كافٍ.</li> <li>اتصل بنجار لتصليح ارتخاء الأرضية أو إندارها.</li> <li>تأكد من أن الأرضية مستوية وصلبة، ويمكن أن تدعم الثلاجة بشكل كافٍ.</li> <li>اتصل بنجار لتصليح ارتخاء الأرضية أو إندارها.</li> <li>نظّف جوانب باب الثلاجة والواجهة بماء دافئ وصابون لإزالة أي شحوم وأوساخ وقنارة من على السطح. وامسحه بقطعة قماش جافة. افحص الجوانب للتأكد من نظافته تمامًا.</li> </ul> |

## 11- اكتشاف الأخطاء وإصلاحها

| المشكلة                                     | السبب المحتمل                                                                                                                                                                                                                                                                                                                            | الحل الشائع                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| صانع الثلج الأوتوماتيكي.                    |                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| صانع الثلج لا يصنع أي ثلج.                  | <ul style="list-style-type: none"> <li>• تم إيقاف تشغيل صانع الثلج.</li> <li>• الثلجة ليست متصلة بخط المياه أو صمام المياه غير مفتوح.</li> <li>• خط إمداد المياه ممتلئ.</li> <li>• فلتر المياه غير مثبت بشكل صحيح.</li> <li>• ربما يكون فلتر المياه مسدوداً بمادة غريبة.</li> </ul>                                                      | <ul style="list-style-type: none"> <li>• شغل صانع الثلج. بالنسبة لصانع الثلج الخاص بالطاظمة الطازجة، اضغط على زر تشغيل-إيقاف تشغيل صانع الثلج مرة واحدة.</li> <li>• وصل الوحدة بمصدر إمداد المياه المنزلي وتأكد من أن صمام المياه مفتوحاً.</li> <li>• تأكد من أن خط الإمداد لا ينثني عند دفع الثلجة في مكانها مقابل الجدار.</li> <li>• أزل فلتر المياه وأعد تركيبه. وتأكد من وضعه بالكامل في وضع القفل.</li> <li>• يجب استبدال الفلتر إذا كان الماء يتدفق ببطء أو لا يتدفق على الإطلاق، أو إذا كان عمر الفلتر ستة أشهر أو أكثر.</li> </ul>                                  |
| صانع الثلج لا يصنع كمية كافية من الثلج.     | <ul style="list-style-type: none"> <li>• صانع الثلج ينتج كمية من الثلج أقل من المتوقع.</li> <li>• ربما يكون فلتر المياه مسدوداً بمادة غريبة.</li> <li>• خط إمداد المياه ممتلئ.</li> <li>• ضغط المياه منخفضاً للغاية. ضغط الإيقاف والتشغيل منخفضاً للغاية (أنظمة الأبار فقط).</li> <li>• نظام التناضح العكسي في طور الاسترجاع.</li> </ul> | <ul style="list-style-type: none"> <li>• سينتج صانع الثلج 1 كجم تقريباً من الثلج كل 24 ساعة وذلك اعتماداً على أوضاع الاستخدام.</li> <li>• ينبغي استبدال الفلتر إذا كان تدفق الماء أقل من الطبيعي أو إذا كان عمر الفلتر ستة أشهر أو أكثر.</li> <li>• تأكد من أن خط الإمداد لا ينثني عند دفع الثلجة في مكانها مقابل الجدار.</li> <li>• ينبغي الاستعانة بشخص ما لضبط مستوى ضغط الإيقاف والتشغيل بنظام مضخة المياه (أنظمة الأبار فقط).</li> <li>• من الطبيعي أن يكون مستوى ضغط نظام التناضح العكسي أقل من 137 كيلو باسكال (20 رطل / بوصة مربعة) أثناء طور الاسترجاع.</li> </ul> |
| تتجمد مكعبات الثلج كقطعة واحدة.             | <ul style="list-style-type: none"> <li>• لا يتم استخدام مكعبات الثلج بشكل كافٍ أو ينقطع التيار الكهربائي لفترة طويلة.</li> <li>• مكعبات الثلج مجوفة (عبارة عن قشور من الثلج بداخلها ماء). تنكسر المكعبات المجوفة في العلبة وتتسرب المياه إلى قطع الثلج، مما يتسبب في تجميدها كقطعة واحدة.</li> </ul>                                     | <ul style="list-style-type: none"> <li>• أزل وعاء الثلج وتخلص من الثلج، سينتج صانع الثلج ثلج جديد.</li> <li>• ينبغي استخدام الثلج على الأقل مرتين أسبوعياً للحفاظ على مكعبات الثلج منفصلة.</li> <li>• يحدث هذا بشكل عام عندما لا يحصل صانع الثلج على كمية كافية من الماء. ويكون هذا عادة نتيجة انسداد فلتر المياه أو تقييد إمدادات المياه. استبدل فلتر المياه وإذا استمر الوضع كما هو، فتحقق من عدم عمل صمام المياه بشكل كامل أو إذا ما كان هناك انثناء في خط إمداد المياه.</li> </ul>                                                                                      |
| الموزع (الثلج والماء)                       |                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| لا يقوم الموزع (الثلج والماء) بتوزيع الثلج. | <ul style="list-style-type: none"> <li>• لا يوجد ثلج في العلبة كي يتم توزيعه.</li> <li>• أبواب الثلجة ليست مغلقة تماماً.</li> <li>• تم الضغط على بريمة الموزع لفترة طويلة، مما أدى إلى سخونة موتور الموزع أكثر من اللازم.</li> </ul>                                                                                                     | <ul style="list-style-type: none"> <li>• انظر قسم "صانع الثلج لا يصنع أي ثلج".</li> <li>• تأكد من إغلاق أبواب الثلجة تماماً.</li> <li>• ستم إعادة ضبط وافي الحمل الزائد الخاص بالموتور في غضون ثلاث دقائق تقريباً ويمكن توزيع الثلج بعد ذلك.</li> </ul>                                                                                                                                                                                                                                                                                                                     |

## 10- دليل تخزين الأطعمة

| الفئة             | المنتج                   | فترات التخزين الموصى بها للأطعمة الطازجة *                                                                                                              |              |                                                           | نصائح التخزين                                                                                                                                      |
|-------------------|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|-----------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
|                   |                          | الثلاجة                                                                                                                                                 | تبريد إضافي  | المجمد                                                    |                                                                                                                                                    |
| اللحوم            | فقاقي ومفروم             | 2-1 أيام                                                                                                                                                | 3-5 أيام     | 2-3 أشهر                                                  | احتفظ باللحوم الباردة في الجزء الخلفي من الثلاجة حيث يكون هو الأكثر برودة.                                                                         |
|                   | القطع والشرائح           | 4-3 أيام                                                                                                                                                | 5-7 أيام     | 4-6 أشهر                                                  | يمكن أن يتسبب البلاستيك في الإصابة بتعرق اللحم إذا تم تخزين اللحم في الثلاجة لأكثر من يوم.                                                         |
|                   | لحوم باردة               | 3-5 أيام                                                                                                                                                | 5-7 أيام     | 4-6 أشهر                                                  | يمكن أن يحتاج لحم الشواء إلى ما يصل إلى 48 ساعة لإذابة الثلج بشكل صحيح، لذا تعين نقل لحم الشواء المجمد إلى الثلاجة قبل يومين من استخدامه.          |
|                   | لحم الشواء               | 3-5 أيام                                                                                                                                                | 1 أسبوع      | 12 أشهر                                                   |                                                                                                                                                    |
| الدواجن           | الدجاج                   | 2-1 أيام                                                                                                                                                | 5-7 أيام     | 2 أشهر                                                    | من الأفضل التخلص من الدجاج إذا اكتسب رائحة أو لونًا لا تعرف عنه شيء.                                                                               |
|                   | الدجاج المشوي            | 3-5 أيام                                                                                                                                                | 1 أسبوع      | 12 أشهر                                                   | لا يكون البيض الكامل مناسبًا للتجميد، ويمكن تجميد البيض المبيض قليلاً لمدة أربعة أشهر.                                                             |
|                   | بيضات                    | 6 أسابيع                                                                                                                                                | غير مناسب    | غير مناسب                                                 |                                                                                                                                                    |
| الماكولات البحرية | الأسماك الكاملة والشرائح | 3-2 أيام                                                                                                                                                | 5-7 أيام     | 2 أشهر                                                    | تُحفظ في وعاء محكم الإغلاق أو مغلف برقائق معدنية.                                                                                                  |
|                   | الكرنك والسمطعون         | 2-1 أيام                                                                                                                                                | 3-5 أيام     | 2 أشهر                                                    | لا تجفف أبدًا القريدس في ماء مالح حيث سيؤدي ذلك إلى تجفيف لحمه.                                                                                    |
|                   | القريدس                  | 2-1 أيام                                                                                                                                                | 3-5 أيام     | 2 أشهر                                                    |                                                                                                                                                    |
|                   | الحليب                   | حتى تاريخ انتهاء صلاحيته                                                                                                                                | غير مناسب    | غير مناسب                                                 | من الأفضل التخلص من منتجات الألبان إذا اكتسبت رائحة أو لونًا لا تعرف عنه شيء.                                                                      |
| منتجات الألبان    | الزبادي                  | 7-10 أيام                                                                                                                                               | غير مناسب    | غير مناسب                                                 |                                                                                                                                                    |
|                   | الجبن الجاف              | 2 أسابيع - 2 أشهر                                                                                                                                       | 2-1 أشهر     | 2 أشهر (الجبن المشور)                                     | يمكن أن يستمر التخزين من أسبوعين إلى شهرين اعتمادًا على نوع الجبن الجاف.                                                                           |
|                   | الجبن الطري              | 2-1 أسابيع                                                                                                                                              | 2-4 أسابيع * | غير مناسب                                                 | * قد يتغير ملمس المنتج بحسب نوع الجبن الطري.                                                                                                       |
|                   | الزبدة                   | 8 أسابيع                                                                                                                                                | 3-4 أشهر     | 12 أشهر                                                   |                                                                                                                                                    |
|                   | الفواكه والخضروات        | ثمة مدة صلاحية مختلفة لكل نوع من أنواع الفاكهة والخضروات، ويظل بعضها طازجًا لبضعة أيام مثل الفاصوليا، ويمكن أن يستمر بعضها طازجًا لبضعة أشهر مثل البصل. | غير مناسب    | من 8 إلى 12 شهرًا عند التجميد مقطعة ومسلوقة بكميات صغيرة. | احتفظ بالخضروات في درج الخضروات بعيدًا عن فتحات التهوية لتجنب التجعد.                                                                              |
|                   |                          |                                                                                                                                                         |              |                                                           | إذا قمت بغسل الفاكهة والخضروات قبل تخزينها، تأكد من تجفيفها أو لفها في ورق مجفف قبل تخزينها في الثلاجة حيث سيؤدي وضعها مبللة إلى تعرضها للتلف.     |
|                   |                          |                                                                                                                                                         |              |                                                           | حاول فصل الفاكهة عن الخضروات لأن الفاكهة تنتج مستويات عالية من الإيثيلين (عامل النضج) مما قد يؤدي إلى نضجها قبل الأوان وإفساد الخضروات المحيطة بها |



\* يرجى العلم أنه يجب استخدام هذه المعلومات باعتبارها معلومات إرشادية فقط، وأن فترات التخزين الفعلية ستختلف وفقًا لكيفية استخدامك للثلاجة.

### تحذير



لا تستخدم الجهاز إلا مع فلتر المياه المقدم من شركة  
Electrolux Home Products Pty Ltd أو وكيل  
الخدمة المعتمد التابع لها.

من الضروري كي يتسنى التشغيل الصحيح لهذا الجهاز مراعاة  
تعليمات الشركة المصنعة.


### استبدال فلتر المياه

**إزالة الفلتر:** اسحب الغطاء تجاهك وسوف ينخفض الغطاء للأسفل  
ويُتيح لك إمكانية وصول إلى الفلتر.

**إعادة تركيب الفلتر:** اضغط على الغطاء لأعلى باتجاه البطانة ثم  
اضغط عليه باتجاه الجزء الخلفي من الخزانة. سوف يُثبت غطاء الفلتر  
في مكانه.

ليس من الضروري إيقاف تشغيل مصدر إمداد المياه لتغيير الفلتر،  
ومع ذلك ينبغي الاستعداد لمسح أي كميات صغيرة من المياه المستربة  
أثناء استبدال الفلتر.

- 1- تأكد من إيقاف تشغيل صانع الثلج
- 2- أزل الفلتر من خلال تدوير عكس اتجاه عقارب الساعة 180 درجة
- حرك خرطوشة فلتر المياه القديم بشكل مستقيم خارج المبيت  
وتخلص منها.
- 3- أخرج خرطوشة الفلتر الجديد واستخدم دليل المحاذاة، ثم ركب  
الخرطوشة برفق في مبيت الفلتر حتى تستقر في مقابل توصيلة  
الفلتر الموجودة في الجزء الخلفي من المبيت.
- 4- قم بتعشيق الفلتر عن طريق تدويره بإحكام في اتجاه عقارب الساعة  
حتى يستقر في مكانه (يتعذر تدوير الفلتر بمجرد تعشيقه).
- 5- ضوع كوب شرب في مقابل موزع الماء أثناء التحقق من عدم  
وجود أي تسرب في مبيت الفلتر، ويُعد صدور أي تنفقات ورششة  
عندما يُخرج النظام الهواء من نظام الموزع هو أمر طبيعي.
- 6- استمر بعد ملء كوب من الماء في تنظيف النظام لمدة أربع دقائق  
تقريبًا.
- 7- شقّل صانع الثلج
- 8- اضغط مع الاستمرار لمدة ثلاث ثواني على الزر  
"Reset Water Filter" (إعادة ضبط فلتر المياه)  
بعد استبدال الفلتر لإعادة ضبط مؤقت استبدال الفلتر.
- 9- أعد غطاء الفلتر بالضغط عليه نحو الأعلى وثبته ثانية في مكانه.

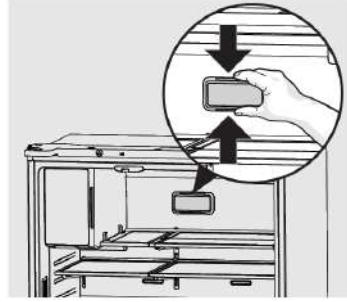


### فلتر المياه

تأتي ثلاثتك على نظام لفلتر المياه، ويعمل هذا النظام على فلتر جميع  
مياه الشرب الموزعة، وكذلك المياه المستخدمة لإنتاج الثلج. يوجد فلتر  
المياه في الجانب العلوي الأيمن من حجيرة الأطعمة الطازجة.

يتعين عليك بوجه عام تغيير فلتر المياه كل ستة أشهر لضمان أعلى  
جودة ممكنة للمياه. تخطرك حالة فلتر المياه التي تظهر في واجهة  
المستخدم بضرورة استبدال الفلتر بعد تدفق كمية قياسية من الماء  
(750 لترًا) عبر النظام.

إذا لم يتم استخدام ثلاثتك لفترة من الوقت (أثناء النقل على سبيل  
المثال)، فعليك حينئذ تغيير الفلتر قبل إعادة تركيب الثلاثية.

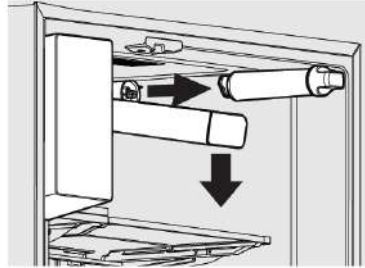

ملاحظة: يُرجى عند طلب فلتر بديل طلب نفس نوع الفلتر الموجود  
حاليًا في ثلاثتك.

## 9- معلومات عامة

## 9-1 تنظيف ثلاجتك

تنبيه



كي يتسنى تنظيف درج الخضروات أو علبة المجمد باستخدام أدوات تمديد انزلاقية متداخلة، فما عليك سوى مسحها بقطعة قماش مبللة وماء دافئ بصابون. لا تعمر الغطاء في الماء حيث يمكن أن يؤثر هذا على تشغيل الأداة الانزلاقية.

## إيقاف تشغيل الثلاجة

في حالة إيقاف تشغيل الثلاجة لفترة طويلة، فاتبع الخطوات التالية لتقليل فرص التعفن:

- 1- أخرج جميع الأطعمة منها.
- 2- أفضل القابض الكهربائي عن مقبس الطاقة.
- 3- نظف الأجزاء الداخلية وجففها تمامًا.
- 4- تأكد من فتح جميع الأبواب قليلاً لتدوير الهواء.

## 9-2 تغيير الفلتر

## فلتر الهواء (موديلات محددة)

يوجد فلتر الهواء في النصف العلوي من حجرة الأطعمة الطازجة.

## استبدال فلتر الهواء

ينبغي عليك تغيير فلتر الهواء كل ستة أشهر (يخطرک مصباح حالة الفلتر الموجود على لوحة اللمس بضرورة استبدال الفلتر بعد ستة أشهر) لضمان فترة مثلى للروائح الموجودة بالثلاجة

- 1- أزل غطاء فلتر الهواء بالضغط على جوانب الغطاء معاً وإزالتها من البطانة.
- 2- أزل الفلتر القديم وتخلص منه.
- 3- أخرج الفلتر الجديد وثبته في المبيت. ينبغي أن يكون الوجه المفتوح بالفلتر (وسائط الكربون) مثبتاً في مواجهة منفذ (فتحة) الهواء أثناء التنفق المتعدد.
- 4- أعد غطاء فلتر الهواء بالضغط على جوانب الغطاء معاً وثبته ثانية في مكانه.
- 5- اضغط مع الاستمرار لمدة ثلاث ثواني على زر "Reset Air Filter" (إعادة ضبط فلتر الهواء) بلوحة التحكم. عندما يتوقف تشغيل مصباح LED، فهذا يكون قد تم إعادة ضبط الحالة.

تحذير



قبل التنظيف: أوقف تشغيل الثلاجة من مقبس الكهرباء وافصل السلك الكهربائي لمنع احتمال إصابتك بالصدمة الكهربائية.

الأبواب والأجزاء الخارجية (أبيض وفضي):  
ينبغي تنظيف الأبواب فقط بماء فاتر وصابون وقطعة قماش ناعمة.

فولاذ غير قابل للصدأ:

صنعت ثلاجتك الفولاذية من فولاذ غير قابل للصدأ ومقاوم لظهور العلامات. يتميز هذا الفولاذ المقاوم للصدأ بطبقة حماية خاصة متطورة تسهل إزالة العلامات مثل بصمات الأصابع وبقع الماء. كي يتسنى الحفاظ على مظهر الثلاجة، فينبغي تنظيفها بانتظام بماء فاتر وصابون وقطعة قماش ناعمة.

تنبيه



لا تستخدم أبداً منظفات الفولاذ غير القابل للصدأ أو بطانات كاشطة أو منظفات أخرى يمكن أن تتسبب في خدش سطح الثلاجة، ولا يغطي الضمان تلف الجهاز بعد تسليمه.


## الأجزاء الداخلية

نظف الثلاجة من الداخل بانتظام بقطعة قماش ناعمة وصابون خفيف غير معطر وماء فاتر، وجفف جميع الأسطح والأجزاء القابلة للإزالة تماماً وتجذب وصول الماء إلى عناصر التحكم. استبدل الأجزاء القابلة للإزالة، وقم بتوصيل سلك الطاقة وتشغيل الثلاجة قبل إعادة الأطعمة إليها.


## ممانعت التسرب بالأبواب

احرص دوماً على نظافة ممانعت التسرب بالأبواب عن طريق غسلها بمنظف معتدل وماء دافئ، ثم تجفيفها بشكل كامل. يمكن أن تتسبب الأطعمة والمشروبات اللزجة في التصاق ممانعت التسرب بالخزانة وتمزقها عند فتح الباب.  
لا تستخدم أبداً ماء ساخن أو مذيبيات أو منظفات تجارية تُستعمل لتنظيف المطابخ أو منظفات أبروسول أو ملمعات معادن أو منظفات كاوية أو كاشطة أو بودرة مطهرة لتنظيف الثلاجة. تحتوي العديد من منتجات التنظيف والمنظفات المتوفرة تجارياً على مذيبيات تضر بثلاجتك.  
لا تستخدم سوى قطعة قماش ناعمة مع صابون خفيف غير معطر وماء فاتر.

يمكن تركيب الأدراج الوسطى حتى ثلاثة أوضاع ارتفاع ويمكن أيضاً قلبها بمقدار 90 درجة للسماح بتخزين الزجاجات

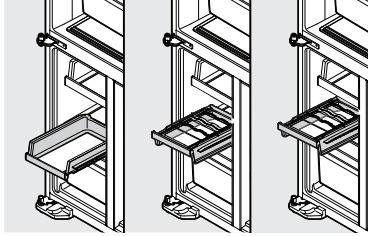

الأرفف ب 3 أوضاع لارتفاع وقابلة للقلب

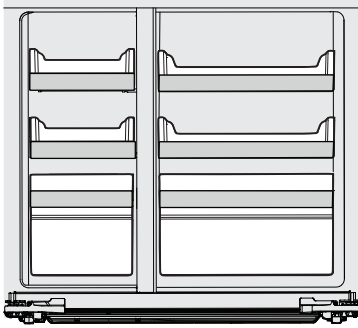

مثال للتهيئة المحتملة للأرفف



توجد عجلات في ظهر كافة الأرفف. تأكد من أن جميع العجلات متحاذية في مساراتها كي يتسنى تشغيلها بشكل صحيح. إذا لم يتم محاذاة الرف بشكل صحيح، فسوف يسبب مشاكل عند استخدام الباب.

## التخزين بالمجمد



كي يتسنى إزالة أرفف وأدراج المجمد و الـ FlexSpace:

جميع أرفف وأدراج المجمد و الـ FlexSpace قابل للإزالة:

1- افتح الأبواب بشكل كامل كي يتسنى الوصول إلى الأرفف / الأدراج.

2- اسحب الرف / الدرج حتى الوصول إلى المصد، وقم بالرفع لأعلى والسحب حتى تتم الإزالة من الخزانة.

3- اعكس تلك الخطوات لإعادة تركيب الرف / الدرج.

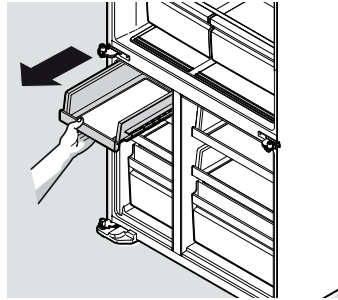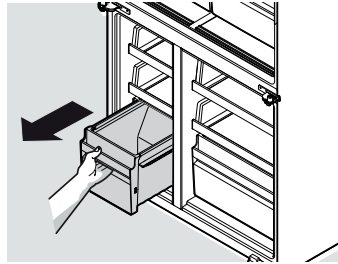

### علب الأبواب القابلة للتعديل

كي يتسنى إزالة درج الخضروات لتنظيفه:

تحتوي بعض الموديلات على علب أبواب قابلة للضغط يمكن تحريكها بما يتناسب مع احتياجاتك الفردية.  
كي يتسنى تعديل علبة الباب القابلة للطي:

- 1- تأكد من أن العلبة مثبتة بإحكام بالقضيب الموجود في الباب.
- 2- أمسك جانبا واحداً من العلبة وضع اليد الأخرى على الجانب القابل للضغط.
- 3- اسحب جانب العلبة حتى يتم ضغطها على العرض المطلوب.


ملاحظة: قد يكون من الصعب سحب العلبة القابلة للطي للخارج، وقد يستلزم الأمر بعض القوة.

### لتحريك علبة الباب على طول قضيب:

- 1- قم بإزالة العلبة لأعلى بحيث يكون الجزء الخلفي من العلبة بعيداً عن الباب، في حين يظل الخطاف معشفاً.
- 2- قم بتحريك العلبة على طول القضيب حتى الوصول إلى الوضع المنشود.
- 3- اخفض العلبة ثانية حتى تصل إلى مكانها.


### كي يتسنى نقل علبة الباب من قضيب لآخر:

- 1- ارفع العلبة لأعلى حتى ينفصل تشبيك الخطاف.
- 2- انقل العلبة إلى مكان القضيب المنشود.
- 3- اضغط على خطاف العلبة في القضيب حتى يتم تشبيك الخطاف.

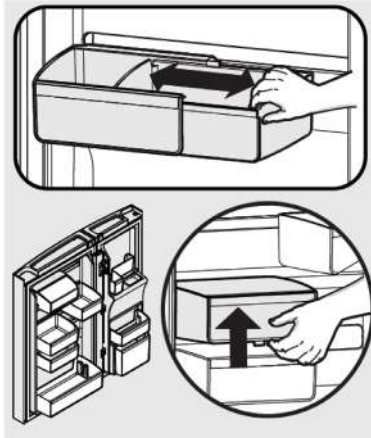

### علب الأبواب القابلة للضغط


- 1- اسحب الدرج للخارج حتى يتوقف.
- 2- ارفع الجزء الأمامي قليلاً واخلع الدرج.

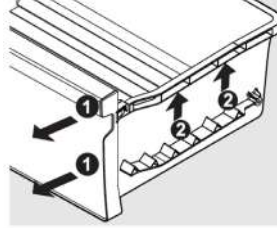

### إزالة درج

### درج SnackZone المجوف

يُعد هذا الدرج هو الخيار المثالي لتخزين اللحوم الباردة والأجبان. حرك الغطاء للخلف للسماح بالوصول إلى الأدراج.

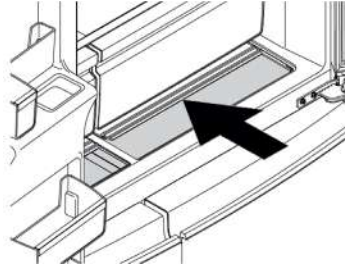

### فتح SnackZone

### الأبواب

### علب التخزين


تستخدم أبواب حبيزة الأطعمة الطازجة نظام علب تخزين قياسية. وتكون كافة هذه العلب قابلة للإزالة لتنظيفها بسهولة، ويمكن أيضاً ضبط العلب حسب احتياجاتك.  
تعتبر علب الباب خياراً مثالياً لتخزين البرطمانات والزجاجات والعلب وأوعية المشروبات الكبيرة، كما أنها تتيح لك إمكانية الاختيار السريع للعناصر المستخدمة بشكل متكرر.



## 8- ميزات التخزين



2- وعند وجود النصف الأمامي بالكامل أسفل النصف الخلفي، ارفع الجزء الأمامي من الرف لقلبه لأعلى باتجاه الجزء الخلفي من الخزانة.

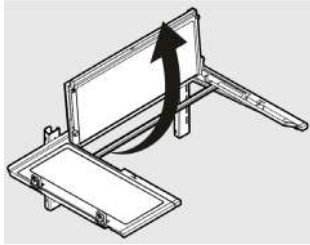

## الرف القلاب/السفلي الانزلاقي

## الأدراج


تحتوي ثلاجتك على مجموعة متنوعة من أدراج التخزين.

## درج الخضروات (مع إمكانية تحكم تلقائية في الرطوبة)

صممت أدراج الخضروات لتخزين الفواكه والخضروات وغيرها من المنتجات الطازجة الأخرى. تحتوي أدراج الخضروات على عنصر تحكم تلقائي في الرطوبة (مع غشاء قابل للاستبدال) بجانب كل درج خضروات أسفل التحكم في الرطوبة.

## كي يتسنى إزالة غشاء التحكم التلقائي في الرطوبة:

- 1- ينبغي الوصول إلى مؤخرة غطاء التحكم في الرطوبة.
- 2- اسحب الغطاء.
- 3- اسحب الغطاء باتجاه الجزء الخلفي من الخزانة وقم بإزالته.
- 4- استبدل غشاء الرطوبة.
- 5- استبدل الغطاء بتنفيذ الخطوات السابق بترتيب معاكس. كرر هذا الإجراء مع درجي الخضروات.

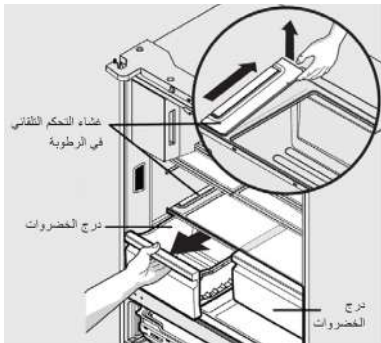

## فتح درج الخضروات

ينبغي التعامل بحرص مع الأرفف المصنعة من الزجاج المقسى لتجنب الإصابة الشخصية أو تلف الممتلكات يمكن أن تنكسر الأرفف فجأة إذا حدث بها شق أو تعرضت للخدش أو حدث تغير مفاجئ في درجات الحرارة. اترك الأرفف الزجاجية حتى تكتسب درجة الحرارة الغرفة قبل البدء في تنظيفها. لا تقم بغسلها في غسالة الأطباق.


يمكنك بسهولة ضبط مواضع الأرفف في حجيرات الأطعمة الطازجة بما يتناسب مع احتياجاتك. تحتوي الأرفف على كتيفات تثبيت متصلة بدعامات مشقوقة في مؤخرة كل حبيزة.

## كي تغير موضع رف:

- 1- أزل جميع الأطعمة من على الرف.
- 2- ارفع الحافة الأمامية لأعلى واسحب الرف للخارج.
- 3- قم بإجراء الاستبدال من خلال إدخال خطافات كثيفة التركيب في فتحات الدعم المنشودة.
- 4- اخفض الرف وثبته في موضعه.

## كي يتسنى تعديل الرف القلاب:


- 1- أزل الأطعمة من على الرف.
- 2- ارفع الحافة اليمنى من الرف لأعلى وادفعه إلى اليسار تجاه صانع الثلج

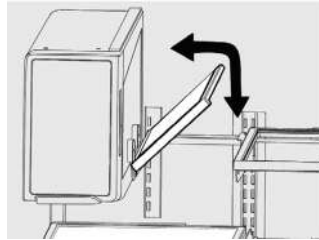

## الرف القلاب


## كي يتسنى تعديل الرف القلاب/السفلي الانزلاقي:

- 1- اسحب نصف الرف الأمامي للأمام حتى ينخفض ظهره، ثم ادفع برفق نصف الرف الأمامي للخلف وأسفل نصف الرف الخلفي.

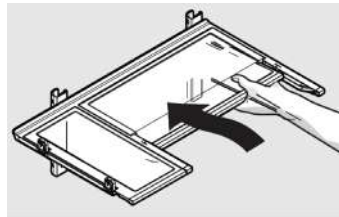

## الرف القلاب/السفلي الانزلاقي

- لم تكن تستخدم موزع الثلج بشكل متكرر، حيث ستتجمد مكعبات الثلج وتصير قطعة واحدة في علبة الثلج، مما يؤدي إلى الضغط على آلية الموزع.

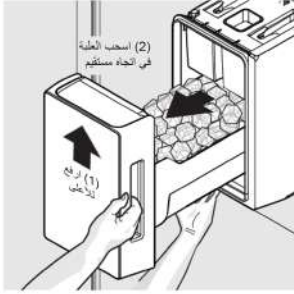

### إزالة علبة الثلج

أزل علبة الثلج وقم بهزها لتفكيك المكعبات أو لتنظيف العلبة كما هو موضح سلفاً.




تنبيه

لا تستخدم مطلقاً كسارة ثلج أو أداة حادة مماثلة لتفتيت الثلج، إذ يمكن أن يؤدي هذا إلى إتلاف علبة الثلج وآلية الموزع. استخدم ماء دافئ لتفكيك قطع الثلج الملتصقة. تأكد من جفاف علبة الثلج تماماً قبل استبدالها.



مهم

تجنب عند إزالة علبة الثلج أو استبدالها تدوير البريمة الموجودة في علبة الثلج. وإذا تم تدوير البريمة عن طريق الخطأ، فيجب عليك إعادة محاذاة البريمة عن طريق تدويرها بزاوية 45 درجة (انظر الشكل التالي) حتى تتواءم علبة الثلج مع آلية التدوير. وإذا لم يتم محاذاة البريمة بشكل صحيح عند استبدال علبة الثلج، فلن تقوم الثلجة بتوزيع الثلج. وقد لا ينغلق باب الأطعمة الطازجة أيضاً بشكل صحيح، مما يتسبب في تسرب الهواء الدافئ إلى حجرة الأطعمة الطازجة.

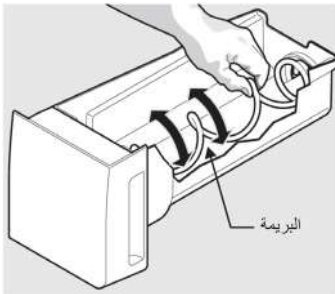

### ضبط بريمة علبة الثلج

### نصائح خاصة بالموزع / صانع الثلج

- إذا لم تكن ثلاثتك متصلة بمصدر إمداد مياه أو تم إيقاف تشغيل مصدر إمداد المياه، فيتعين إيقاف تشغيل صانع الثلج كما هو موضح في القسم السابق.
- تكون الأصوات التالية طبيعية عند تشغيل صانع الثلج:
  - تشغيل الموتور
  - تساقط الثلج في علبة الثلج
  - فتح صمام المياه أو إغلاقه
  - تدفق الماء
- إذا كنت بحاجة إلى كمية كبيرة من الثلج دفعة واحدة، فمن الأفضل الحصول على مكعبات الثلج مباشرة من علبة الثلج.
- يمكن أن تتحول نكهة مكعبات الثلج المخزنة لفترة طويلة إلى نكهة غريبة. قم بتفريغ علبة الثلج كما هو موضح فيما يلي.
- من الطبيعي عند توزيع مكعبات الثلج أن يكون لديك كمية صغيرة من القطع الصغيرة بالإضافة إلى المكعبات الكاملة.
- وزع الثلج في العبوة الخاصة بك قبل إضافة السوائل لتجنب تناثر الثلج.
- من الطبيعي أن يمتلئ الثلج حتى يصل إلى أعلى علبة الثلج.



تنبيه

في حالة تنقية إمدادات المياه المقدمة إلى ثلاثتك، فينبغي التأكد من صيانة جهاز التنقية بشكل صحيح. يمكن أن تتسبب المواد الكيميائية الناشئة عن تلف جهاز تنقية المياه في إتلاف صانع الثلج.

### تنظيف صانع الثلج

- نظف صانع الثلج وعلبة الثلج على فترات منتظمة، خاصة قبل الإجازة أو الانتقال.
- 1- أوقف تشغيل صانع الثلج.
  - 2- أزل علبة الثلج بسحبها بشكل مستقيم.
  - 3- قم بتفريغ علبة الثلج وتنظيفها بعناية باستخدام منظف معتدل. لا تستخدم مواد تنظيف قوية أو كاشطة. لا تضع صانع الثلج في غسالة الأطباق. اشطفه بماء نظيف.
  - 4- اترك علبة الثلج تجف تماماً قبل إعادتها إلى المجمد.
  - 5- أعد علبة الثلج ثانية إلى وضعها. قم بتشغيل صانع الثلج.

### أزل علبة الثلج وقم بتفريغها في الحالات التالية:

- انقطاع التيار الكهربائي لمدة طويلة (ساعة أو أطول) حيث سيؤدي ذلك إلى ذوبان مكعبات الثلج في علبة الثلج وتتجمد وتصير قطعة واحدة بعد عودة التيار الكهربائي، مما يسبب ضغط على آلية الموزع.

## 7- موزع الماء والتلج الأتوماتيكي

### استخدام صانع التلج بعد تثبيت التلاجة

تأكد قبل إعداد التلج للمرة الأولى من تجهيز نظام إمداد المياه. يمكن أن يؤدي وجود هواء في خطوط المياه الجديدة إلى قيام صانع التلج بدورتين أو ثلاث دورات فارغة. وعلاوة على ذلك، فإذا لم يتم تنظيف النظام، فقد يتغير لون مكعبات التلج أو يكون لها نكهة غريبة في المرة الأولى.


### تجهيز نظام إمداد المياه



تنبيه

كي يتسنى التشغيل الصحيح لموزع المياه، فينبغي أن يتراوح ضغط إمداد المياه بين 206 كيلو باسكال و 689 كيلو باسكال (30 رطل لكل بوصة مربعة و 100 رطل لكل بوصة مربعة). قد يتسبب الضغط المفرط في تعطل النظام.

- 1- ابدأ في ملء النظام بالضغط مع الاستمرار على زجاجة شراب في مقابل الموزع.
- 2- احتفظ بالزجاجة في هذا الوضع حتى يخرج الماء من الموزع. قد يستغرق الأمر حوالي دقيقة ونصف.
- 3- استمر في توزيع الماء لحوالي أربعة دقائق كي يتسنى تنظيف النظام وتوصيلات المياه من أي شوائب (توقف لإفراغ الزجاج حسب الضرورة).

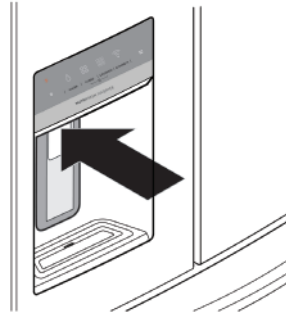

### الموزع

ملاحظة: يحتوي موزع المياه على جهاز مدمج يعمل على إيقاف تدفق المياه بعد ثلاث دقائق من الاستخدام المستمر. كي يتسنى إعادة ضبط الجهاز الإغلاق هذا، فما عليك سوى تحرير بريمة الموزع. يتم تبريد أول 750 مل من الماء الموزع فقط.



تحذير

ينبغي تنظيف النظام لمدة دقيقتين تقريباً بعد عدم استخدامه لفترة تتجاوز 30 يوماً

### تشغيل صانع التلج والعناية به

يتسنى لصانع التلج إنتاج التلج في غضون 24 ساعة بعد تثبيت التلاجة بشكل صحيح وتبريدها لعدة ساعات. سوف يملا صانع التلج علبة التلج من الخلف. يجب عليك توزيع بعض التلج كي يتسنى تحريك التلج إلى الأمام في علبة التلج، حيث سيسمح هذا بامتلاء العلبة تماماً.

### صانع التلج وسعة علبة تخزين التلج

ينبغي أن ينتج صانع التلج 1 كجم من التلج كل 24 ساعة. تتسع علبة التلج لحوالي 1.8 كجم من التلج.

### تشغيل صانع التلج وإيقاف تشغيله



مهم

يتم تشغيل صانع التلج في المصنع حتى يتسنى له العمل بمجرد تثبيت تلاجتك. إذا لم تستطع توصيل مصدر إمداد مياه، فينبغي حينئذ ضبط ميزة تشغيل / إيقاف تشغيل صانع التلج على إيقاف التشغيل؛ وإذا لم تفعل ذلك، فقد يصدر صمام ملء صانع التلج صوت ضوضاء عالية عندما تحاول تشغيله دون وجود ماء.

يتم التحكم في إنتاج التلج عن طريق ميزة تشغيل / إيقاف تشغيل صانع التلج الموجودة بلوحة التحكم. يؤدي الضغط على ميزة التشغيل/إيقاف التشغيل إلى تشغيل صانع التلج وإيقاف تشغيله.

ملاحظة: يحتوي صانع التلج أيضاً على ذراع إشارة بلاستيكي مدمج يعمل على إيقاف إنتاج التلج تلقائياً عند امتلاء علبة التلج. لا ينبغي استخدام ذراع الإشارة هذا لإيقاف صانع التلج يدوياً.



مهم

يمكنك الملاحظة في بعض الأحيان أن مكعبات تلج صغيرة بشكل غير معتاد في الدلو أو في التلج الموزع. يمكن أن يحدث هذا أثناء التشغيل العادي لصانع التلج.

وإذا بدأت في رؤية تلك المكعبات الصغيرة بشكل متكرر، فقد يكون ذلك مؤشراً على انخفاض ضغط الماء، أو أنه يتعين استبدال فلتر المياه. يتم توصيل كمية أقل من الماء إلى صانع التلج خلال في كل دورة عندما يقترب فلتر المياه من نهاية عمره الافتراضي ويصير مسدوداً بالجسيمات. تذكر أنه يتعين استبدال فلتر المياه بأخر جديد بعد مرور ستة أشهر أو أكثر منذ آخر مرة قممت فيها بتغيير فلتر المياه. يمكن أن تحتاج المياه المنزلية ذات الجودة الرديئة إلى تغيير الفلتر على فترات أقل.

## 6- ضبط درجات حرارة التبريد

### فتح الباب

في حالة ترك الباب مفتوحاً لمدة 5 دقائق أو أكثر، فسيصدر صوت إنذار وسيضيئ مؤشر فتح الباب على الشاشة. يمكن إيقاف خاصية التنبيه من خلال إغلاق الباب أو الضغط على أي مفتاح. ستعود لوحة التحكم إلى وضع التشغيل الطبيعي بعد إغلاق الباب.


### نغمة الخطأ

سيصدر صوت تنبيه إذا حاول المستخدم تحديد اختيار غير متاح.

ملاحظة: الإعدادات الموصى بها لأي منتج مثبت في المطبخ هي 3 درجات مئوية لحجيرة الأطعمة الطازجة و 18 درجة مئوية تحت الصفر للمجمد.



إذا كان منتجك يحتوي على طعام يتجمد في حجيرة الأطعمة الطازجة، فقم بزيادة درجة الحرارة بمعدل 1 أو 2 درجة مئوية. إذا وضعت الطعام في نطاق 3 سم أمام منافذ الهواء، فقد تكون هناك فرصة لتجميد الطعام.

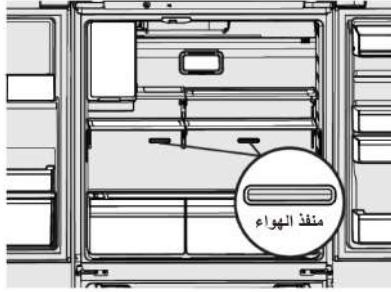

ملاحظة: يمكن أن تتفاوت مزايا التحكم والتنبيهات حسب الموديل.

### الإنذارات والتنبيهات

#### فلتر المياه

يجب استبدال فلتر المياه عندما يكون مضيئاً. قم بتغيير فلتر المياه كل 6 أشهر أو بعد توزيع 750 لترًا من الماء. اضغط مع الاستمرار على الزر لمدة 3 ثوانٍ لإعادة الضبط. سيصدر صوت نغمة بمجرد إعادة الضبط.

#### تركيب فلتر الهواء

يتعين عند تشغيل الثلاجة لأول مرة تركيب فلتر الهواء الذي يتم تخزينه بالجانب الأيسر من درج الخضروات، مع ضرورة اتباع طريقة التثبيت على النحو التالي. فلتر الهواء المشط الكربوني

- 1- فك الغطاء البلاستيكي.
- 2- ركب الفلتر وفقاً لدليل الاستخدام والعناية الخاص بثلاجتك.
- 3- أعد ضبط ضوء التنكير بالفلتر بثلاجتك.
- 4- استبدل الفلتر كل 6 أشهر.

يجب استبدال فلتر الهواء عندما يكون مضيئاً. قم بتغيير فلتر الهواء كل 6 أشهر. اضغط مع الاستمرار على الزر لمدة 3 ثوانٍ لإعادة الضبط. سيصدر صوت نغمة بمجرد إعادة الضبط.


## TASTESEALFLEX لوحة التحكم 2-5

| الوظيفة الرئيسية                                                                                                                | الوصف                     | الزر/الأيقونة |
|---------------------------------------------------------------------------------------------------------------------------------|---------------------------|---------------|
| سيتم قفل الواجهة تلقائياً بعد 3 ثوان دون أي تفاعل. اضغط مع الاستمرار لمدة 3 ثوان لإلغاء قفل الواجهة. ستصدر نغمة لتأكيد اختيارك. | إلغاء القفل               | 1             |
| سيؤدي اختيار خيار "النبيذ والشمبانيا" إلى ضبط درجة حرارة TASTESEALFLEX إلى 7 درجات مئوية. ستصدر نغمة لتأكيد اختيارك.            | النبيذ والشمبانيا         | 2             |
| سيؤدي اختيار خيار "الوجبات الخفيفة" إلى ضبط درجة حرارة TASTESEALFLEX إلى 3 درجات مئوية. ستصدر نغمة لتأكيد اختيارك.              | وجبات خفيفة باردة         | 3             |
| سيؤدي اختيار خيار "المشروبات الباردة" إلى ضبط درجة حرارة TASTESEALFLEX إلى 0 درجة مئوية. ستصدر نغمة لتأكيد اختيارك.             | مشروبات باردة             | 4             |
| سيؤدي اختيار خيار "اللحوم والمأكولات البحرية" إلى ضبط درجة حرارة TASTESEALFLEX إلى -2 درجة مئوية. ستصدر نغمة لتأكيد اختيارك.    | اللحوم والمأكولات البحرية | 5             |
| سيؤدي اختيار خيار "المجمد" إلى ضبط درجة حرارة TASTESEALFLEX وفقاً لدرجة حرارة حجرة المجمد. ستصدر نغمة لتأكيد اختيارك.           | المجمد                    | 6             |




| الزر/الأيقونة | الوصف                 | الوظيفة الرئيسية                                                                                                                                                                                                                            |
|---------------|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7             | التلج المجروش         | اضغط على مفتاح "جرش" لتحديد التلج المجروش. سيضيئ ضوء مؤشر فوق الميزة النشطة.                                                                                                                                                                |
| 8             | إضاءة                 | تشغيل وإيقاف تشغيل الموزع.                                                                                                                                                                                                                  |
| 9             | إعادة ضبط فلتر المياه | اضغط مع الاستمرار لمدة 3 ثوان بعد استبدال الفلتر لإعادة ضبطه.                                                                                                                                                                               |
| 10            | إعادة ضبط فلتر الهواء | اضغط مع الاستمرار لمدة 3 ثوان بعد استبدال الفلتر لإعادة ضبطه.                                                                                                                                                                               |
| 11            | التبريد السريع        | يعني التبريد السريع سرعة أعلى لتبريد الطعام في حجرة التلاجة. يتم إيقاف التنشيط بعد 6 ساعات.                                                                                                                                                 |
| 12            | ضبط درجة الحرارة      | اضغط على + أو - لضبط درجة الحرارة المنشودة.<br>درجة حرارة المجمد - يتراوح نطاق درجات الحرارة من 23 درجة مئوية تحت الصفر إلى 15 درجة مئوية تحت الصفر.<br>درجة حرارة التلاجة - يتراوح نطاق درجات الحرارة من +1 درجة مئوية إلى +7 درجات مئوية. |
| 13            | فتح الباب             | يضيئ الباب ويصدر صوت تنبيه عند تركه مفتوحاً لمدة 5 دقائق أو أكثر. ويظل مضاء طالما كان الباب مفتوحاً. سيؤدي الضغط على أي مفتاح إلى كتم صوت التنبيه وإعادة ضبطه.                                                                              |
| 14            | استبدال فلتر المياه   | تضيء الشاشة كل 6 أشهر أو عندما يتعين استبدال الفلتر. اضغط مع الاستمرار لمدة 3 ثوان على "Reset Water Filter" (إعادة ضبط فلتر المياه) لإعادة ضبطه.                                                                                            |
| 15            | استبدال فلتر الهواء   | تضيء الشاشة كل 6 أشهر أو عندما يتعين استبدال الفلتر. اضغط مع الاستمرار لمدة 3 ثوان على "Reset Air Filter" (إعادة ضبط فلتر الهواء) لإعادة ضبطه.                                                                                              |

## 1-5 واجهة المستخدم الخارجية

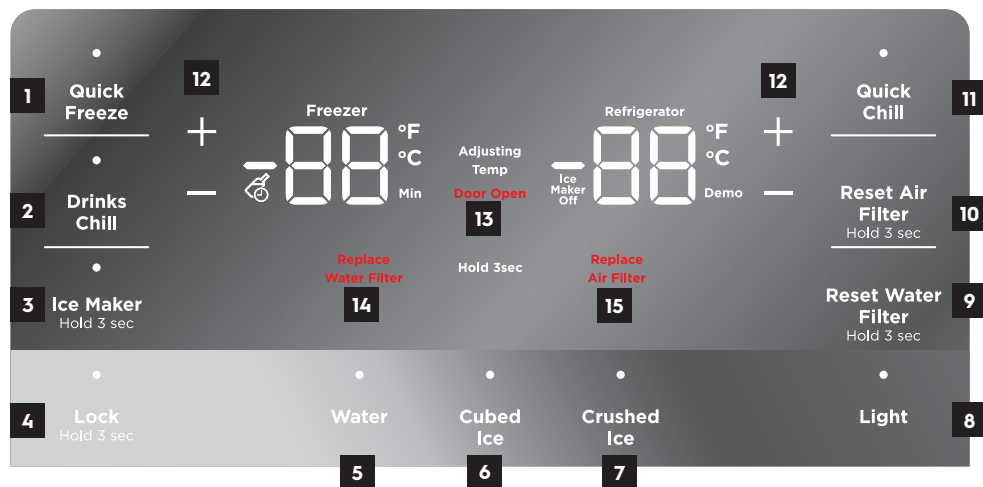


| الزر/الأيقونة | الوصف                                 | الوظيفة الرئيسية                                                                                                                                                                                                                                                               |
|---------------|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1             | التجميد السريع<br>(تشغيل/إيقاف تشغيل) | تنشيط سرعة أعلى لتجميد الطعام في المجمد. يتم إيقاف التنشيط بعد 12 ساعة.                                                                                                                                                                                                        |
| 2             | تبريد المشروبات                       | التبريد السريع لأي مشروب داخل حجرة المجمد. المس مفتاح Drinks Chill (تبريد المشروبات) وسيتم عرض قيمة زمنية على شاشة درجة حرارة المجمد (بالدقائق) ويمكن تغييرها باستخدام أزرار +/--. ستصدر نغمة عند إدخال الوقت، يتراوح مدى صدورها بين 20 و 45 دقيقة وبفاصل زمنية قدرها 5 دقائق. |
| 3             | صانع الثلج                            | يكون صانع الثلج قيد التشغيل عندما يكون ضوء LED مضاء. سيومض المؤشر عند توزيع الثلج عندما يكون صانع الثلج في حالة إيقاف التشغيل. اضغط مع الاستمرار لمدة 3 ثوانٍ لتشغيل / إيقاف تشغيل صانع الثلج.                                                                                 |
| 4             | القفل                                 | اضغط مع الاستمرار لمدة 3 ثوانٍ لتنشيط/إيقاف تنشيط القفل. لن يتسنى لك في حالة القفل تغيير أي إعدادات على الشاشة أو توزيع الثلج والماء. سيومض المؤشر ويتم تشغيل نغمة تحذير مسموعة.                                                                                               |
| 5             | الماء                                 | اضغط على مفتاح "الماء" لتحديد الماء. سيضيئ ضوء مؤشر فوق الميزة النشطة.                                                                                                                                                                                                         |
| 6             | مكعبات الثلج                          | اضغط على مفتاح "مكعب" لتحديد مكعبات الثلج. سيضيئ ضوء مؤشر فوق الميزة النشطة.                                                                                                                                                                                                   |

### لتوصيل خط إمداد المياه بصمام مدخل صانع الثلج

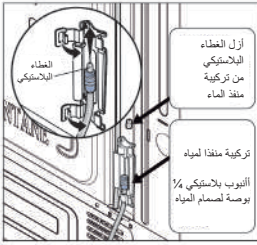

الشكل 2

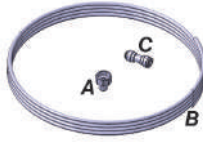

الشكل 1

أ - محول 1/2 إلى 1/4 بوصة لتوصيل مخرج إمداد الماء بخط إمداد المياه.

ب - خط إمداد مياه 1/4 بوصة بطول 3 أمتار.

ج - موصل 1/4 بوصة لتوصيل خط إمداد المياه بأنبوب الثلاجة.

#### 1- أفضل الثلاجة من مصدر الطاقة

2- وصِلَ المحول (العنصر أ أعلاه) بخط المياه، ووصل خط إمداد المياه (العنصر ب) بالمحول (العنصر أ) مع تثبيت الطرف الآخر من خط إمداد المياه في دلو أو حوض. شغّل مصدر إمداد المياه لإزالة الهواء وتنظيف خط إمداد المياه. أوقف تشغيل مصدر إمداد المياه

3- أزل الواقي البلاستيكي من أنبوب الثلاجة ووصِلَ خط مصدر إمداد المياه (العنصر ب) بأنبوب الثلاجة باستخدام الموصل (العنصر ج) كما هو موضح في الشكل تأكد من إدخال الأنابيب بالكامل في التوصيلات.

4- لف الطول الزائد من خط إمداد المياه خلف الثلاجة بحيث لا يهتز مع تشغيل الثلاجة. لا تقم بلف الأنابيب.

5- شغّل مصدر إمداد المياه وتحقق من عدم وجود تسريبات في التوصيلات.

6- أعد توصيل الثلاجة بمصدر الطاقة.

7- يتم تشغيل صانع الثلج في المصنع، سيتسنى لثلاجتك في غضون 24 إنتاج الثلج وينبغي عدم استخدام الثلج المنتج في أول مرة.

ملاحظة: يمكنك انتظار أول إنتاج للثلج في غضون ال 24 ساعة الأولى من تشغيل الوحدة. كي يتسنى منع أي مشاكل تتعلق بإنتاج الثلج نرجى التأكد من أن جميع خطوط المياه جاهزة. راجع "تجهيز نظام إمداد المياه" في قسم "موزع الثلج والماء الأوتوماتيكي".



مهم

يحتوي نظام إمداد المياه بثلاجتك على عدة خطوط لأنابيب المياه وفلتر مياه وصمام مياه. وكي يتسنى ضمان أن موزع المياه لديك يعمل بشكل صحيح يجب ملء هذا النظام بالماء تمامًا عند توصيل ثلاجتك لأول مرة بخط إمداد المياه المنزلي.

#### فلتر المياه

لا ينبغي استخدام فلتر المياه في المياه غير الآمنة من الناحية البيولوجية أو المياه ذات الجودة غير المعروفة. يمكن أن ينخفض عمر خدمة الفلتر عند استخدامه في مصادر إمداد مياه تحتوي على قدر كبير من الجسيمات أو الشوائب الأخرى.

يُعد انخفاض معدل التدفق إشارة إلى ضرورة تركيب فلتر جديد، ويمكن أن يؤثر عدم استبدال الفلتر عند الحاجة لذلك سلبيًا على كفاءة عمل صانع الثلج. لا يغطي الضمان مطالبات الصيانة الناتجة عن عدم استبدال الفلتر.

تتوفر فلاتر المياه البديلة من مراكز قطع الغيار التابعة لشركة "Electrolux Home Products" ويمكن إرسالها إليك تحقيقًا لراحتك (راجع أرقام الاتصال الخاصة بقطع الغيار في صفحة الضمان).



## 4- توصيل مصدر إمداد المياه



تحذير

لتجنب حدوث صدمة كهربائية، والتي يمكن أن تسبب الوفاة أو إصابة جسدية خطيرة، فصل التلجة من مصدر الطاقة الكهربائية قبل توصيل خط إمداد المياه بالتلجة.



تحذير

لتجنب تلف الممتلكات:

- لا تركيب أنابيب إمداد المياه في المناطق التي تنخفض فيها درجات الحرارة دون درجة التجمد.
- يمكن أن تسبب المواد الكيميائية الناشئة عن تلف منقي الماء في إتلاف صانع الثلج. إذا كان منزلك يحتوي على نظام لتنقية المياه، فينبغي التأكد من صيانة جهاز التنقية وعمله بشكل صحيح



تحذير

لا توصل الجهاز مطلقاً بمصدر إمداد مياه ساخنة  
لا تستخدم مياه غير آمنة من الناحية الميكروبيولوجية أو مياه دون معرفة مستوى جودتها ودون تطهيرها بشكل كافٍ.



مهم

تأكد من أن توصيلات خط إمداد المياه لديك تتوافق مع القوانين المحلية الخاصة بالسباكة.  
يتوافق الجهاز مع متطلبات منع التدفق العكسي ذات الصلة المحددة في المعيار AS / NZS 2845.1


سوف تحتاج إلى ما يلي قبل تركيب خط إمداد المياه:

- الأدوات الأساسية: مفتاح ربط انضباطي، شفرة مسطحة مفك براغي ومفك Phillips™
- يحتاج موزع المياه وصانع الثلج الأوتوماتيكي إمدادات مياه صالحة للشرب مع نطاق ضغط يتراوح بين 206 كيلو باسكال و 689 كيلو باسكال (30 رطل لكل بوصة مربعة و 100 رطل لكل بوصة مربعة). إذا كان ضغط إمداد الماء أعلى من 100 رطل لكل بوصة مربعة، فينبغي حينئذ تركيب صمام لتحديد الضغط.
- يلزم وجود مصدر إمداد مياه يناسب حنفية 1/2 بوصة بجوار التلجة. كما يوصى بأن يقوم سباك مرخص بتركيب منفذ جديد لإمداد المياه بالقرب من الجهاز إذا لم يكن الأنبوب المورد مع الجهاز طويلاً بما فيه الكفاية. ولا ينصح بتطويل الأنبوب حيث يمكن أن يؤثر ذلك سلباً على تدفق الماء إلى صانع الثلج أو موزع مياه. وإذا كان هناك خطر يتعلق بارتفاع معدل التدفق عن الحد الأقصى، يبلغ معدل التدفق 2.46 لتر / دقيقة، فينبغي حينئذ تركيب جهاز للتحكم في التدفق

### لعمل عمليات ضبط نهائية لارتفاع الباب:


1- أدخل مفتاح Electrolux بمقاس 10 مم في عمود المفصلة السفلية.

2- لخفض الباب: أدر برغي الضبط في اتجاه عقارب الساعة.  
لرفع الباب: أدر برغي الضبط في اتجاه عكس عقارب الساعة.

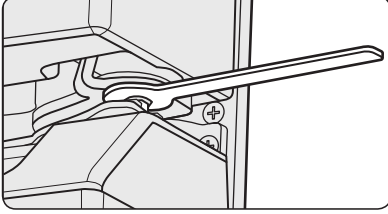

### عمود التقسيم القلاب


اضبط عمود التقسيم القلاب كي تحقق التوصليل الصحيح بدليل عمود التقسيم عن طريق التأكد من طي عمود التقسيم القلاب واتخاذ وضع عمودي على باب الأطعمة الطازجة. إذا لم يكن دليل عمود التقسيم في الوضع الصحيح، فقد يمنع الباب من الإغلاق تماماً.

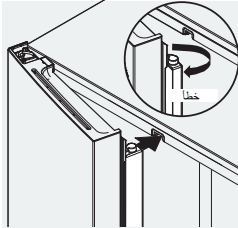

### المحاذاة الرأسية للأبواب السفلية (لنماذج كواترو Quattro)

في بعض الحالات، يمكن أن تنحرف الأبواب السفلية رأسياً قليلاً. ولتصحيح هذا الانحراف، يمكن استخدام إسفين على شكل حرف سي (C) مرفق مع الوحدة.

يجب تثبيت الإسفين بالمفصلة السفلية للباب السفلي مع رفع الإسفين لوصلة المشبك، كما هو مبين في الصور.

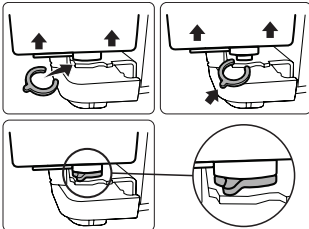

### تسوية الخزانة ومحاذاة باب الثلاجة (إذا لزم الأمر)

• يجب أن تظل جميع الزوايا الأربع للخزانة ثابتة بإحكام على الأرض

• يجب أن تكون المقدمة مرتفعة قليلاً للتأكد من إغلاق الأبواب وقلعها بشكل صحيح.

• ينبغي محاذاة الأبواب مع بعضها البعض وتكون مستوية.


يمكن تلبية معظم هذه الشروط عن طريق رفع أو خفض البكرات الأمامية القابلة للتعديل

### لتسوية الخزانة باستخدام البكرات الأمامية:

1 - اخفض الساقين السفليتين المضادتين للانعكاس حتى تلمسا الأرض. استخدام زردية لضبطها.

لرفع: لف الساق في اتجاه عقارب الساعة.  
للخفض: لف الساق في اتجاه عكس عقارب الساعة.


2- تأكد من أن كلا البابين غير ثابتين بحيث تلامس السدادات الخاصة بهما الخزانة من جميع الجوانب الأربعة وتأكد كذلك من أن الخزانة مستقرة.

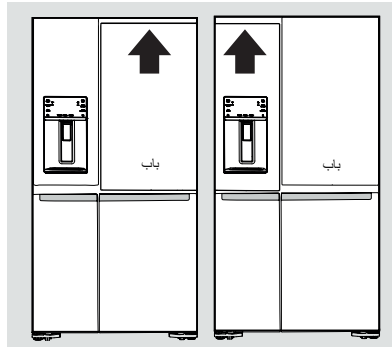

ملاحظة: تم تصميم الأبواب بحيث تتباهى بما تحويه من خزائن (دون تندفق). وتجدر الإشارة إلى أن مسافات الخلوص الموضحة سلفاً هي الحد الأدنى الموصى به لمسافات الخلوص.

تَثْبِيْتٌ ثَلَاثَتِكَ

اترك مسافات الخلوص التالية كي يتسنى تثبيت الثلجة بسهولة وتدوير الهواء بشكل مناسب وعمل التوصيلات الكهربائية وأعمال السباكة:

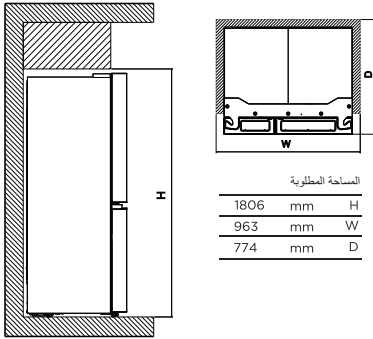

ملاحظة: إذا تم وضع ثلاثتك بحيث كان جانب مفصلة الباب في مقابل جدار، فقد تضطر إلى ترك مساحة إضافية كي يتسنى فتح الباب على نطاق أوسع.

## فَتَحَ الْبَابَ

ينبغي وضع ثلاثتك في وضع يتسنى معه الوصول السهل إلى أي منضدة عند إخراج الطعام. كي يتسنى الحصول على أفضل استخدام للأدراج الثلاثة وعلب المجمد يجب أن تكون الثلاثة في وضع يمكن خلاله فتح الثلاثة والمجمد بشكل كامل.



**إضاءة LED**

جهازك مزود بمصباح LED طويل العمر. وفي حالة توقف ضوء مصباح LED عن التشغيل وهذا غير محتمل فيتعين حينئذ صيانة أضواء LED من خلال وكيل الصيانة المعني لتجنب حدوث أي مخاطر تؤثر على السلامة. ارجع إلى صفحة الضمان للحصول على تفاصيل الاتصال بوكيل الصيانة.

## فتح العبوة



## البيئة

تكون معظم مواد التغليف قابلة لإعادة التدوير. ومن ثم يُرجى التخلص من هذه المواد من خلال مستودع إعادة التدوير المحلي لديك أو عن طريق وضعها في حاويات تجميع مناسبة.

مهم - تحقق من وجود أي تلفيات أو علامات، وإذا وجدت الثلاثة تالفة أو عليها أي علامات، فيجب عليك الإبلاغ عن ذلك في غضون 7 أيام إذا كنت ترغب في المطالبة بالتعويض عن التلف / العلامات بموجب الضمان الذي تقدمه الشركة المصنعة. لا يؤثر هذا على حقوقك القانونية.

نظف ثلاجتك جيدًا باتباع الإرشادات الواردة في قسم "التنظيف" وامسح أي أتربة متراكمة أثناء الشحن.

### تحدد مكان الثلجة




يجب عدم وضع أنظمة الأيروسول الأوتوماتيكية (مثل مكافحة الحشرات) بجوار المنتج حيث يمكن أن يتسبب الرذاذ الصادر عنها في أضرار طويلة المدى على الأجزاء البلاستيكية الخارجية للجهاز.

لا تضع الثلجة في مكان شديد البرودة أو غير محمي، على سبيل المثال في مرآب أو في شرفة. يجب أن تكون درجة الحرارة المحيطة أعلى من 10 درجة مئوية.


ضع الثلجة في مكان جاف مع تجنب المناطق عالية الرطوبة.  
ضع الثلجة في مكان جاف مع تجنب المناطق عالية الرطوبة.

ضع الثلجة في مكان جاف مع تجنب المناطق عالية الرطوبة.


يوضح الرسم البياني التالي الحيز الموصى به للسماح بتهوية ثلاثتك.

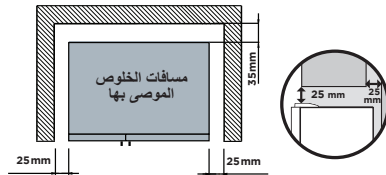

عند وضعها في منطقة بزائوية، فإن وجود تباعد بمقدار 260 مم على الأقل في الجانب الأيمن و 355 مم على الأقل بالجانب الأيسر بجانب المفصلة سيسمح بفتح الأبواب بشكل كافٍ لتمكين إزالة العلب والأرفف.

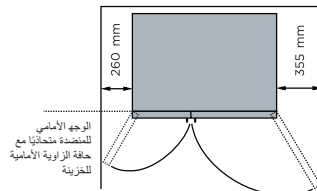

## 2- لمحة سريعة عن مزايا المنتج

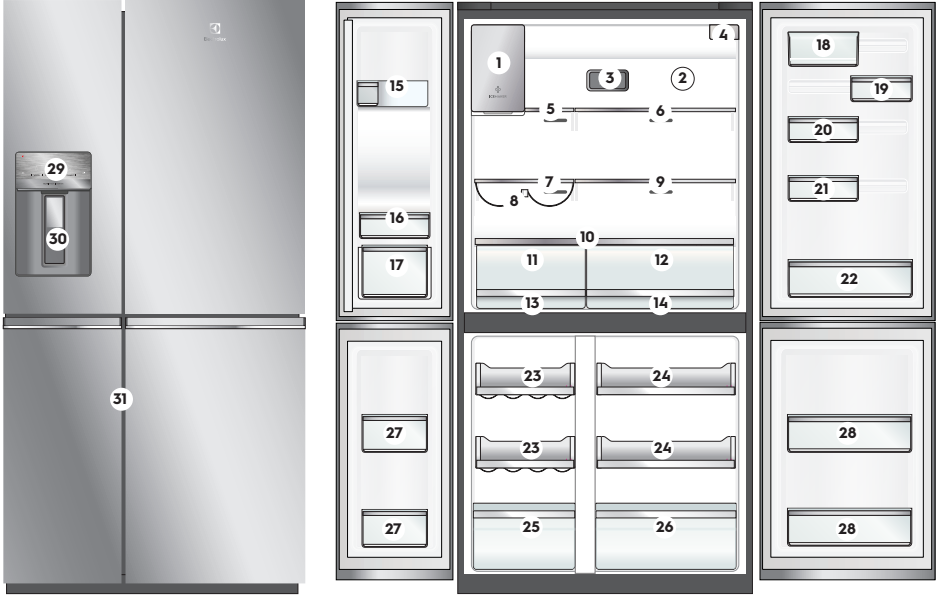

|    |                              |    |                                  |    |                                           |
|----|------------------------------|----|----------------------------------|----|-------------------------------------------|
| 1  | صانع الثلج                   | 11 | درج حفظ الخضروات والفاكهة        | 21 | علبة قابلة للتوسعة                        |
| 2  | موزع الهواء - متعدد التدفق   | 12 | درج حفظ الخضروات والفاكهة        | 22 | علبة تخزين الزجاجات                       |
| 3  | فلتر الهواء                  | 13 | حجيرة قسم الوجبات الخفيفة اليسرى | 23 | رف FlexSpace™                             |
| 4  | فلتر المياه                  | 14 | حجيرة قسم الوجبات الخفيفة اليمنى | 24 | رف المجمد                                 |
| 5  | رف زجاجي قلاب                | 15 | علبة الباب الثابتة العلوية       | 25 | درج FlexSpace™ (لحفاظ على نضارة الخضروات) |
| 6  | رف زجاجي انزلاقي / قابل للطي | 16 | علبة الباب الثابتة اليسرى        | 26 | درج المجمد                                |
| 7  | رف زجاجي Spillsafe™ أيسر     | 17 | علبة الباب اليسرى                | 27 | علبة باب FlexSpace™                       |
| 8  | رف مشروبات                   | 18 | طية الأليان FlexStor™            | 28 | علبة باب المجمد                           |
| 9  | رف زجاجي Spillsafe™ أيمن     | 19 | علبة 1/3 FlexStor™               | 29 | لوحة التحكم في التلاجة / المجمد           |
| 10 | غطاء رف الخضروات             | 20 | علبة 2/3 FlexStor™               | 30 | مشغل موزع المياه والثلج                   |
|    |                              |    |                                  | 31 | لوحة التحكم TASTESEALFLEX                 |
|    |                              |    |                                  |    | (TASTESEALFLEX بجانب باب)                 |

## تحذير !

تحذير بخصوص مادة التبريد R600a

يحتوي هذا الجهاز على مادة تبريد R600a قابلة للاشتعال تجنب المخاطر التي تؤثر على السلامة من خلال تثبيت الجهاز والتعامل معه وصيانتته والتخلص منه بعناية.



- تأكد من أن أنابيب دائرة مادة التبريد لم تتعرض للتلف أثناء النقل والتثبيت.
- يمكن أن يتسبب تسرب مادة التبريد في حدوث إصابات بالعين أو الاشتعال.
- يجب أن يتوفر لكل 8 جرام من مادة التبريد مساحة 1 متر مكعب على الأقل في غرفة تثبيت الجهاز. يمكن معرفة كمية مادة التبريد التي تحتوي عليها التلاجة من خلال مراجعة لوحة التصنيف الموجودة داخل الجهاز.
- إذا لم تكن متأكدًا من كمية مادة التبريد فتحقق من لوحة التصنيف داخل حجرة التلاجة.
- من الخطورة على أي شخص بخلاف فني الخدمة المعتمد أن يقوم بصيانة هذا الجهاز. يجب في كوينز لاند بأسستر البيا أن يحمل فني الصيانة ترخيص التعامل في مجال الأنشطة التي تعمل بالغاز خاص بمواد التبريد الهيدروكربونية كي يتسنى له إجراء عمليات الصيانة أو الإصلاحات التي تتطلب فك أغطية الجهاز.
- تأكد دائماً من عدم انسداد فتحات التهوية في هيكل الجهاز أو في الهيكل الداخلي له.
- لا تستخدم أجهزة ميكانيكية أو وسائل أخرى لتسريع عملية إزالة الجليد بخلاف تلك التي توصي بها الشركة المصنعة.

ملاحظة: يجب عليك قراءة هذه التحذيرات بعناية قبل تثبيت التلاجة أو استخدامها.  
إذا كنت بحاجة إلى مساعدة، فاتصل بمركز رعاية العملاء. لن تتحمل الشركة المصنعة أي مسؤولية حال تجاهل هذه التعليمات أو أي تعليمات أخرى تتعلق بالسلامة واردة في هذا الدليل.

## تحذير !

- من الضروري أن يكون المنفذ الكهربائي موزع بشكل صحيح. استشر فني كهرباء مؤهل إذا لم تكن متأكدًا من ذلك.
- لا تستخدم أجهزة كهربائية داخل حجيرات تخزين الأطعمة بالجهاز ما لم تكن هذه الأجهزة من النوع الموصى به من قبل الشركة المصنعة.
- افصل التلاجة قبل تنظيفها أو نقلها لتجنب حدوث صدمة كهربائية.
- لا تقم أبداً بفصل التلاجة عن طريق سحب السلك الكهربائي إذ يمكن أن يؤدي ذلك إلى تلفه. أمسك القابس بقوة واسحبه للخارج بشكل مستقيم.
- إذا تلف سلك الطاقة، فيجب استبداله من قبل الشركة المصنعة أو وكيل الصيانة التابع لها أو أي أشخاص مؤهلين مماثلين كي تتجنب المخاطر.
- لا تستخدم منظف بخار إذا كان من الممكن أن تتلاصق مكونات متصلة بالتيار الكهربائي بخار التكثيف، فقد يتسبب ذلك في حدوث دائرة قصر أو صدمة كهربائية.
- لا تخزن مواد متفجرة مثل علب الأيروسول التي تحتوي على مادة دافعة قابلة للاشتعال في هذا الجهاز. لا تخزن أي عبوات أيروسول مضغوط مسجل عليها كلمة "قابلة للاشتعال" و / أو يوجد عليها رمز لهب صغير داخل أي تلاجة أو مجمد إذ يمكن أن يتسبب ذلك في حدوث انفجار.
- لا تتسبب في إتلاف دائرة التبريد.
- يحتوي هذا الجهاز على مادة عازلة تتكون من غازات انبعاثية قابلة للاشتعال. تجنب المخاطر التي تؤثر على السلامة من خلال التخلص من هذا الجهاز بعناية.
- إذا كنت ترغب في التخلص من هذه التلاجة، فيرجى الاتصال بالسلطات المحلية لديك واسأل عن الطريقة الصحيحة للتخلص منها.
- قم بإزالة أي أبواب عندما تتخلص من تلاجتك ومجمداتك القديمة، إذ يمكن أن يتعرض الأطفال لخطر الاختناق في حالة انحباسهم بداخلها.
- تأكد عند وضع الجهاز في مكانه من أن سلك التيار الكهربائي غير محشور أو تالف.
- لا تضع منافذ متحركة متعددة المقابس أو مصادر إمداد طاقة متحركة خلف الجهاز.

## المحتويات

- 1- معلومات السلامة ..... 3
- 2- لمحة سريعة عن مزايا المنتج ..... 4
- 3- تثبيت جهازك الجديد ..... 5
- 4- توصيل مصدر إمداد المياه ..... 7
- 5- أداة تحكم ..... 9
- 1-5 واجهة المستخدم الخارجية ..... 9
- 2-5 لوحة التحكم TASTESEALFLEX ..... 11
- 6- ضبط درجات حرارة التبريد ..... 12
- 7- موزع الماء والتلج الأتوماتيكي ..... 13
- 8- ميزات التخزين ..... 15
- 9- معلومات عامة ..... 18
- 1-9 تنظيف ثلاثتك ..... 18
- 2-9 تغيير الفلتر ..... 18
- 10- دليل تخزين الأطعمة ..... 20
- 11- اكتشاف الأخطاء وإصلاحها ..... 21

## أنت محور تفكيرنا

شكرًا لاختيارك هذا المنتج من Electrolux. صممنا هذا المنتج ليقدم لك الأداء المثالي لسنواتٍ عديدة، بفضل التقنيات المبتكرة التي تساعد على جعل الحياة أسهل والميزات التي قد لا تجدها في أي جهازٍ تقليدي. يرجى استقطاع بعض الدقائق من وقتك لقراءة هذا الدليل لتحقيق أكبر استفادة منه.

يرجى زيارة موقعنا الإلكتروني كي يتسنى لك:

الحصول على نصائح تتعلق بالاستخدام والاطلاع على الكتيبات/النشرات وحل الأعطال ومعلومات عن الخدمات:  
**www.electrolux.com**



سجل منتجك للحصول على أفضل خدمة:  
**www.electrolux.com/productregiration**



شراء الملحقات والمواد المستهلكة وقطع الغيار الأصلية لجهازك:  
**www.electrolux.com/shop**



## رعاية وخدمة العملاء


استخدم دومًا قطع غيار أصلية.  
تأكد عند الاتصال بمركز الخدمة المعتمد التابع لنا من توفر البيانات التالية لديك: موديل الجهاز وكود رقم المنتج والرقم التسلسلي.  
يمكن إيجاد هذه المعلومات على لوحة التصنيف.

⚠ تحذير / تنبيه - معلومات السلامة.

📄 نصائح ومعلومات عامة.

🌿 معلومات بيئية.

يخضع هذا المستند للتغيير دون إشعار.



**EQE6879**

